

Date:
User:Thursday, 10/25/2007 2:26:42 PM
Rim Johnston

Process Sheet

46

Customer	: CU-DAR001 Dart Helicopters Services	Drawing Name	: SPACEPOD ASSEMBLY LH/ DSI 9335
Job Number	: 35397		
Estimate Number	: 12775		
P.O. Number	: N/A	Part Number	: D350600241
This Issue	: 10/25/2007 S.O. No. : N/A	Drawing Number	: IIN REV.C PG11,18-21
Prsht Rev.	: NC	Project Number	: N/A
First Issue	: N/A Type : SMALL /MED FAB	Drawing Revision	: N/A
Previous Run	: 35395	Material	: N/A
Written By	: <u>10/07/10/25</u>	Due Date	: 11/15/2007 Qty: 1 Um: Each
Checked & Approved By	: <u>10/07/10/25</u>		
Comment	: Est Rev: A 07.03.07 new issue ec		
	: est rev B 07.04.16 reformat,D3188 revE ec		

Additional Product

Job Number:



Seq. #: Machine Or Operation: Description :

1.0 DC DOCUMENT CONTROL



Comment: DOCUMENT CONTROL

Photocopy bluefile and type labels as per PPP D350-600-241 CHG001

5/9/12/66

2.0 D3186 M Spacepod Door, LH



Comment: Qty.: 1.0000 Each(s)/Unit Total : 1.0000 Each(s)

Spacepod Door, LH

B 30073

ml 07/10/31

3.0 D3188 M Spacepod Body



Comment: Qty.: 1.0000 Each(s)/Unit Total : 1.0000 Each(s)

Spacepod Body

B 30078

ml 07/11/02

4.0 SMALL FAB 1 SMALL & MEDIUM FAB RESOURCE 1



Comment: SMALL & MEDIUM FAB RESOURCE 1

1-Drill holes and cut out latch slots per dwg D3186 (D3186-3 detail)

ml 07/10/31

5.0 QC5 INSPECT WORK TO CURRENT STEP



Comment: INSPECT WORK TO CURRENT STEP

5/9/10/31

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: _____ PAR #: _____ Fault Category: _____ NCR: Yes No DQA: _____ Date: _____

QA: N/C Closed: _____ Date: _____

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries

Date: Thursday, 10/25/2007 2:26:42 PM
User: Kim Johnston

Process Sheet

Customer: CU-DAR001 Dart Helicopters Services

Drawing Name: SPACEPOD ASSEMBLY LH/ DSI 9335

Job Number: 35397

Part Number: D350600241

Job Number:



Seq. #:

Machine Or Operation:

Description :

6.0

D31871

Spacepod Floor



Comment: Qty.: 1.0000 Each(s)/Unit Total : 1.0000 Each(s)

Pick:

Qty Part Number

Description Batch

1 D3187-1

Floor

31835

SG

7.0

ALS41032130

Insert



Comment: Qty.: 28.0000 Each(s)/Unit Total : 28.0000 Each(s)

insert

batch: M105730

See

8.0

A3235020935

Washer - Countersunk



Comment: Qty.: 8.0000 Each(s)/Unit Total : 8.0000 Each(s)

WASHER

M 106150

✓ ml 07/11/05

9.0

SMALL FAB 1

SMALL & MEDIUM FAB RESOURCE 1



Comment: SMALL & MEDIUM FAB RESOURCE 1

1-Drill holes in D3188-1 using drill jig DT8970.

2-Open holes in D3188-1 body floor to Ø0.297" as per dwg D3188

3-Deburr

4-Install inserts in D3188-1 as per Dwg D3188.

ml 07/11/05

10.0

QC5

INSPECT WORK TO CURRENT STEP



Comment: INSPECT WORK TO CURRENT STEP

SB 07/11/05

11.0

D2986

Black Neoprene foam .125



Comment: Qty.: 5.9010 sf(s)/Unit Total : 5.9010 sf(s)

✓ neoprene foam

batch: B30632

ml 07/10/05

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: _____ PAR #: _____ Fault Category: _____ NCR: Yes No DQA: _____ Date: _____

QA: N/C Closed: _____ Date: _____

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries

Date: Thursday, 10/25/2007 2:26:42 PM
User: Kim Johnston

Process Sheet

Customer: CU-DAR001 Dart Helicopters Services

Drawing Name: SPACEPOD ASSEMBLY LH/ DSI 9335

Job Number: 35397

Part Number: D350600241

Job Number:



Seq. #:

Machine Or Operation:

Description :

12.0

SMALL FAB 1

SMALL & MEDIUM FAB RESOURCE 1



Comment: SMALL & MEDIUM FAB RESOURCE 1

1-Cut D2986 Neoprene Foam per template D2986T1

~~B30632~~

ml 07/11/05

13.0

D30153

Lock Nut



Comment: Qty.: 1.0000 Each(s)/Unit Total : 1.0000 Each(s)

Lock Nut

batch: 34197

SP

14.0

D35547

BALL STUD



Comment: Qty.: 1.0000 Each(s)/Unit Total : 1.0000 Each(s)

BALL STUD

batch: 30210

SP

15.0

D35671

DECAL



Comment: Qty.: 1.0000 Each(s)/Unit Total : 1.0000 Each(s)

DECAL

batch: 31127

OKI

SP

16.0

AN960JD516

Washer



Comment: Qty.: 1.0000 Each(s)/Unit Total : 1.0000 Each(s)

Washer

BATCH: M104156

SP

17.0

D2237

Striker Plate



Comment: Qty.: 2.0000 Each(s)/Unit Total : 2.0000 Each(s)

Pick:

Batch: 33486

SP

18.0

MS20426AD45

Rivet



Comment: Qty.: 4.0000 Each(s)/Unit Total : 4.0000 Each(s)

Pick:

Batch: 3459

7/10/30 SP

Dart Aerospace Ltd

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: _____ PAR #: _____ Fault Category: _____ NCR: Yes No DQA: _____ Date: _____

QA: N/C Closed: _____ Date: _____

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries

Date: Thursday, 10/25/2007 2:26:43 PM
User: Kim Johnston

Process Sheet

Customer: CU-DAR001 Dart Helicopters Services

Drawing Name: SPACEPOD ASSEMBLY LH/ DSI 9335

Job Number: 35397

Part Number: D350600241

Job Number:



Seq. #:

Machine Or Operation:

Description :

19.0

D35381

HINGE BRACKET



Comment: Qty.: 2.0000 Each(s)/Unit Total : 2.0000 Each(s)
HINGE BRACKET
batch: 33968

SP

20.0

D2179

Doubler



Comment: Qty.: 2.0000 Each(s)/Unit Total : 2.0000 Each(s)
Pick:
Batch: 30630

SP

21.0

AN526C832R24

screw



Comment: Qty.: 4.0000 Each(s)/Unit Total : 4.0000 Each(s)
Screw
batch: 1104603

SP

PTD

22.0

AN960JD8

Washer



Comment: Qty.: 4.0000 Each(s)/Unit Total : 4.0000 Each(s)
Washer
batch: 1104625

SP

23.0

MS21042L08

Nut



Comment: Qty.: 4.0000 Each(s)/Unit Total : 4.0000 Each(s)
Nut
batch: 1105430

SP

24.0

SMALL FAB 1

SMALL & MEDIUM FAB RESOURCE 1



Comment: SMALL & MEDIUM FAB RESOURCE 1

this step separates hardware, previous steps is for body & floor

N/A m07/11/05

25.0

MS270390811

Screw



Comment: Qty.: 2.0000 Each(s)/Unit Total : 2.0000 Each(s)
Screw
batch: 1104427

7/10/30 SP

Dart Aerospace Ltd

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: _____ PAR #: _____ Fault Category: _____ NCR: Yes ☒ No ☐ DQA: ☒ Date: 07/12/16
 QA: N/C Closed: _____ Date: _____

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			
07.11.20	21.0	Screen NS 526 C 832 R24 was to short substitute with MS27039 C 0827 with washer AN 960303L	LE 07.11.20 QSI042	Substitute w/ MS27039 Batch M106298 (X4) and ① AN96030303L Batch M6956 Provide DSI to customer	LE 07.11.20	07.11.20	LE 07.11.20 QSI042	07.11.20
				Put back in stock. 4X AN 526 C 832 R24 500000	ml 07/11/20			

NOTE: Date & initial all entries

Date: Thursday, 10/25/2007 2:26:43 PM
User: Kim Johnston

Process Sheet

Customer: CU-DAR001 Dart Helicopters Services

Drawing Name: SPACEPOD ASSEMBLY LH/ DSI 9335

Job Number: 35397

Part Number: D350600241

Job Number:



Seq. #:

Machine Or Operation:

Description :

26.0

AN960JD8

Washer



Comment: Qty.: 4.0000 Each(s)/Unit Total : 4.0000 Each(s)

Washer

batch: M104625

59

27.0

NAS1515H3

Washer



Comment: Qty.: 2.0000 Each(s)/Unit Total : 2.0000 Each(s)

Washer

batch: M105164

59

28.0

MS21042L08

Nut



Comment: Qty.: 2.0000 Each(s)/Unit Total : 2.0000 Each(s)

Nut

batch: M105430

59

29.0

D2464

3/4 Seal



Comment: Qty.: 11.3400 f(s)/Unit Total : 11.3400 f(s)

3/4 Seal

Cut 127.00" long batch: 30682

59

30.0

D35671

DECAL



Comment: Qty.: 1.0000 Each(s)/Unit Total : 1.0000 Each(s)

DECAL

batch: 31127

59

31.0

D2586

Door Latch



Comment: Qty.: 2.0000 Each(s)/Unit Total : 2.0000 Each(s)

Door Latch

batch: 33482 32504

59

32.0

D2585

Latch Clamp



Comment: Qty.: 2.0000 Each(s)/Unit Total : 2.0000 Each(s)

Latch Clamp

batch: 33787

7/10/30 50

Dart Aerospace Ltd

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: _____ PAR #: _____ Fault Category: _____ NCR: Yes No DQA: _____ Date: _____

QA: N/C Closed: _____ Date: _____

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries

Date: Thursday, 10/25/2007 2:26:43 PM
User: Kim Johnston

Process Sheet

Customer: CU-DAR001 Dart Helicopters Services

Drawing Name: SPACEPOD ASSEMBLY LH/ DSI 9335

Job Number: 35397

Part Number: D350600241

Job Number:



Seq. #:

Machine Or Operation:

Description :

33.0

D2621

Latch Plate



Comment: Qty.: 2.0000 Each(s)/Unit Total : 2.0000 Each(s)

Latch Plate

batch: 32355

SP

34.0

MS27039115

Screw



Comment: Qty.: 2.0000 Each(s)/Unit Total : 2.0000 Each(s)

Screw

batch: M105108

SP

35.0

AN960JD10

Washer



Comment: Qty.: 2.0000 Each(s)/Unit Total : 2.0000 Each(s)

Washer

batch: M100151

SP

36.0

MS21042L3

Nut



Comment: Qty.: 2.0000 Each(s)/Unit Total : 2.0000 Each(s)

Nut

batch: M104625

SP

37.0

D28571

Hinge Bracket



Comment: Qty.: 1.0000 Each(s)/Unit Total : 1.0000 Each(s)

Hinge Bracket

batch: 33942

→

SP

38.0

D28572

Hinge Bracket



Comment: Qty.: 1.0000 Each(s)/Unit Total : 1.0000 Each(s)

Hinge Bracket

batch: 33457

SP

39.0

D2228

Backing Plate



Comment: Qty.: 4.0000 Each(s)/Unit Total : 4.0000 Each(s)

Backing Plate

batch: 30679

7/10/30

SP

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: _____ PAR #: _____ Fault Category: _____ NCR: Yes No DQA: _____ Date: _____

QA: N/C Closed: _____ Date: _____

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries

Date: Thursday, 10/25/2007 2:26:43 PM
User: Kim Johnston

Process Sheet

Customer: CU-DAR001 Dart Helicopters Services

Drawing Name: SPACEPOD ASSEMBLY LH/ DSI 9335

Job Number: 35397

Part Number: D350600241

Job Number:



Seq. #:

Machine Or Operation:

Description :

40.0

AN526C832R10

Screw



Comment: Qty.: 8.0000 Each(s)/Unit Total : 8.0000 Each(s)

Screw

batch: *M101603*

SP

41.0

AN960JD8

Washer



Comment: Qty.: 12.0000 Each(s)/Unit Total : 12.0000 Each(s)

Washer

batch: *M10554*

SP

42.0

MS21042L08

Nut



Comment: Qty.: 12.0000 Each(s)/Unit Total : 12.0000 Each(s)

Nut

batch: *M105430*

SP

43.0

D35571

BRACKET



Comment: Qty.: 1.0000 Each(s)/Unit Total : 1.0000 Each(s)

BRACKET

batch: *B32647*

SP

44.0

AN526C832R14

Screw



Comment: Qty.: 2.0000 Each(s)/Unit Total : 2.0000 Each(s)

Screw

batch: *9214*

SP

45.0

AN526C832R10

Screw



Comment: Qty.: 2.0000 Each(s)/Unit Total : 2.0000 Each(s)

Screw

batch: *M104603*

2/12/30 1x SP

46.0

SMALL FAB 1

SMALL & MEDIUM FAB RESOURCE 1



Comment: SMALL & MEDIUM FAB RESOURCE 1

Assemble D3186-3 door with D3188-1 body as per Dwg ICA-D350-600

Hardware on previous steps is for door ass'y*

1-drill and plug section I-I and J-J of dwg D3188 p.11 using Hysol 934NA with milled glass fibres 10% to

[Handwritten signature]

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: _____ PAR #: _____ Fault Category: _____ NCR: Yes No DQA: _____ Date: _____

QA: N/C Closed: _____ Date: _____

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			
<i>[Signature]</i>	<i>[Signature]</i>	<i>Screens A10526C 830 R2H are too short</i>		<i>See NCR and re-work</i>				

NOTE: Date & initial all entries

Date: Thursday, 10/25/2007 2:26:43 PM
User: Kim Johnston

Process Sheet

Customer: CU-DAR001 Dart Helicopters Services

Drawing Name: SPACEPOD ASSEMBLY LH/ DSI 9335

Job Number: 35397

Part Number: D350600241

Job Number:



Seq. #:

Machine Or Operation:

Description :

weight

A/R Hysol batch: M105573 expire date: 09/05/2008

A/R Milled fibres batch: M100859

2-Attach Neoprene Foam using Contact Cement

A/R Contact Cement Batch: M102565

m 07/11/20

47.0

QC5

INSPECT WORK TO CURRENT STEP



Comment: INSPECT WORK TO CURRENT STEP

S 07/11/21 (X)
(1X)

48.0

HAND FINISHING1

HAND FINISHING RESOURCE #1



Comment: HAND FINISHING RESOURCE #1

Wing Walk Spacepod top surface of Pod as per Dwg D3188 & QSI 005 4.4

Batch: M106060

M 07/11/21

49.0

QC3

INSPECT POWDER COAT/CHEMICAL CONVERSION



Comment: Inspect Wing Walk

S 07/11/22

50.0

K10021

Spacepod Hardware Kit (-241)



Comment: Qty.: 1.0000 (s)/Unit Total : 1.0000 (s)

32423, SP

51.0

D350600449

SWITCH RELOCATION KIT



Comment: Qty.: 1.0000 Each(s)/Unit Total : 1.0000 Each(s)

SWITCH RELOCATION KIT

31898, SP

52.0

D2985

Label



Comment: Qty.: 1.0000 Each(s)/Unit Total : 1.0000 Each(s)

Label

32470, SP

53.0

D35471

BRACKET



Comment: Qty.: 1.0000 Each(s)/Unit Total : 1.0000 Each(s)

BRACKET

batch: 32372

7/10/30 SP

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: _____ PAR #: _____ Fault Category: _____ NCR: Yes No DQA: _____ Date: _____

QA: N/C Closed: _____ Date: _____

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries

Date: Thursday, 10/25/2007 2:26:43 PM
User: Kim Johnston

Process Sheet

Customer: CU-DAR001 Dart Helicopters Services

Drawing Name: SPACEPOD ASSEMBLY LH/ DSI 9335

Job Number: 35397

Part Number: D350600241

Job Number:



Seq. #:

Machine Or Operation:

Description :

54.0

D35501

STRUT



Comment: Qty.: 1.0000 Each(s)/Unit Total : 1.0000 Each(s)

STRUT

batch: 32450

SP

55.0

D35527

CARBON STEEL GAS SPRING



Comment: Qty.: 1.0000 Each(s)/Unit Total : 1.0000 Each(s)

CARBON STEEL GAS SPRING

batch: 32644

SP

56.0

D35547

BALL STUD



Comment: Qty.: 1.0000 Each(s)/Unit Total : 1.0000 Each(s)

BALL STUD

batch: 32670

D30210

SP

57.0

AN960JD516

Washer



Comment: Qty.: 2.0000 Each(s)/Unit Total : 2.0000 Each(s)

Washer

batch: M10415C

SP

58.0

D30153

Lock Nut



Comment: Qty.: 1.0000 Each(s)/Unit Total : 1.0000 Each(s)

Lock Nut

batch: B34197

7/10/30 SC 1X

59.0

QC4

INSPECT 100% KITS FOR COMPLETENESS



Comment: INSPECT 100% KITS FOR COMPLETENESS

6 11/12/06

60.0

PACKAGING 1

PACKAGING RESOURCE #1



Comment: PACKAGING RESOURCE #1

Identify and pack for shipping as per PPP D350-600-141

Location:

PPP Rev:

B

7/12/06 SP (1X)

Dart Aerospace Ltd

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: _____ PAR #: _____ Fault Category: _____ NCR: Yes No DQA: _____ Date: _____

QA: N/C Closed: _____ Date: _____

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries

Date: Thursday, 10/25/2007 2:26:43 PM
User: Kim Johnston

Process Sheet

Customer: CU-DAR001 Dart Helicopters Services

Drawing Name: SPACEPOD ASSEMBLY LH/ DSI 9335

Job Number: 35397

Part Number: D350600241

Job Number:



Seq. #:

Machine Or Operation:

Description :

61.0

QC21

FINAL INSPECTION/W/O RELEASE



①

Comment: FINAL INSPECTION/W/O RELEASE

207/12/06

Job Completion



U 07.12.06

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: _____ PAR #: _____ Fault Category: _____ NCR: Yes No DQA: _____ Date: _____

QA: N/C Closed: _____ Date: _____

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries

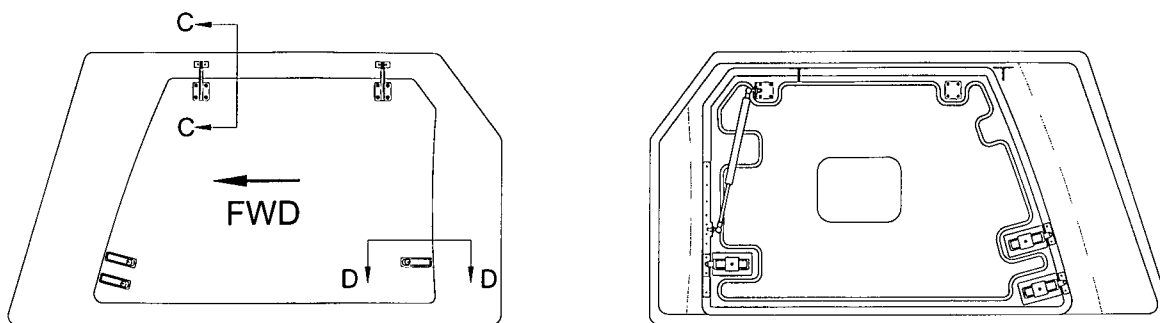


FIGURE 6(a). -141 SPACEPOD KIT (-142 OPPOSITE, -143 SIMILAR)
(OUTSIDE VIEW SHOWN ON LEFT; INSIDE VIEW SHOWN ON RIGHT)



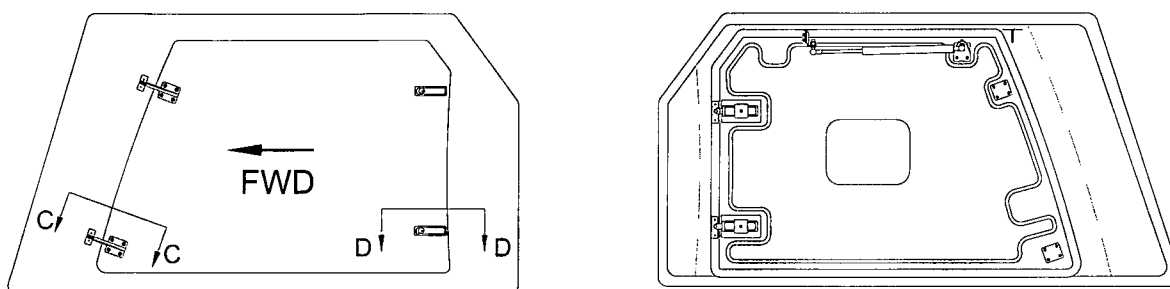


FIGURE 6(b). -241 SPACEPOD KITS (-242 OPPOSITE, -243 SIMILAR)
(OUTSIDE VIEW SHOWN ON LEFT; INSIDE VIEW SHOWN ON RIGHT)

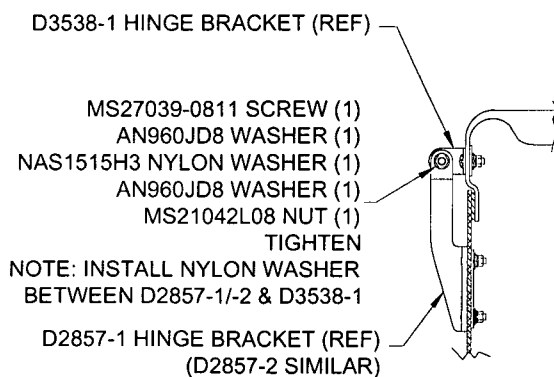

SECTION 'C-C' HINGE
(-141 SHOWN; -142/-143/-241/-242/-243 SIMILAR)

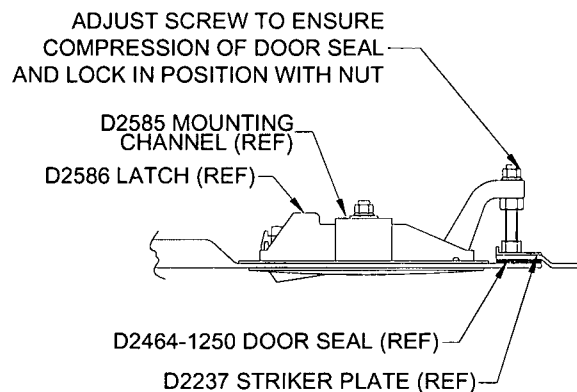

SECTION 'D-D' LATCH

3.2.12 Re-install the following components that were removed from the aircraft in earlier steps:

- Re-install the battery shelf cover or wiring cover per the Aircraft Maintenance Manual. If it is necessary to trim the lower edge to clear the pod floor, touch up the paint using MIL-C-85285 polyurethane paint.
- If applicable, re-install the pop-out float cylinders per the Aircraft Maintenance Manual.
- Re-install the belly panel per the Aircraft Maintenance Manual.

SHOP COPY

RETURN TO

ENGINEERING

UNCONTROLLED COPY
SUBJECT TO AMENDMENT

WITHOUT NOTICE

WORK ORDER

NO. 35397

• COPYRIGHT © 2006 BY DART AEROSPACE LTD •
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.

Revision: C

Date: 07.02.20

- 3.4.5 After the paint has dried, apply the D2464-1250 neoprene seal where removed in earlier steps.
- 3.4.6 Cut out the rectangular section shown in Figures 14(a) and 14(b). Install the D2586 latch, D2588 mounting channel and D2621 latch plate that were removed earlier from the door using new hardware as shown in Figure 14(c).

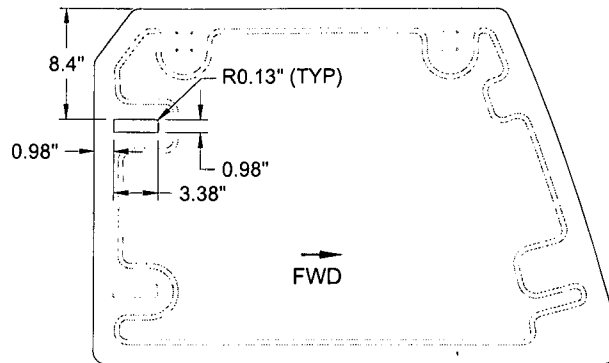


FIGURE 14(a). D3186-1 SPACEPOD DOOR LATCH CUTOUT
(APPLICABLE FOR -041/-043/-141/-143 KITS)

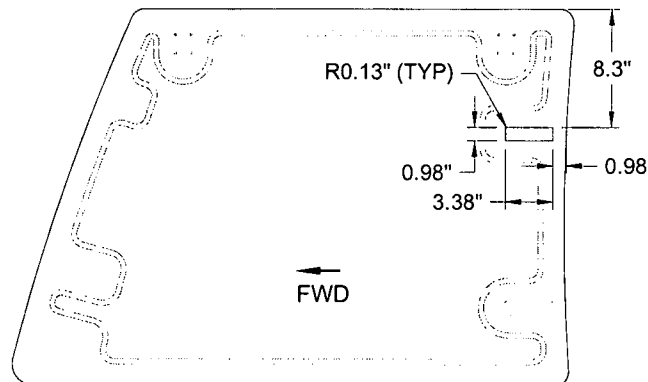


FIGURE 14(b). D3186-2 SPACEPOD DOOR LATCH CUTOUT
(APPLICABLE FOR -042/-142 KITS)

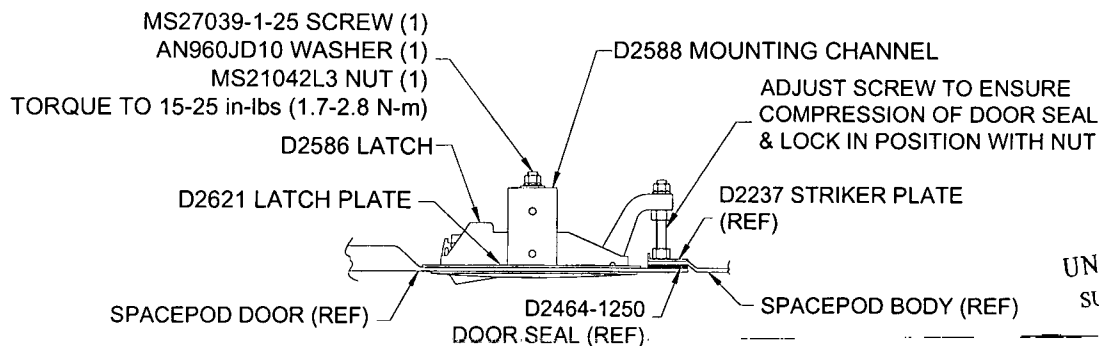


FIGURE 14(c). LATCH INSTALLATION
(SHOWN WITH DOOR INSTALLED ON POD)

SHOP COPY
RETURN TO
ENGINEERING
UNCONTROLLED COPY
SUBJECT TO AMENDMENT
WITHOUT NOTICE
WORK ORDER
NO. 35397

• COPYRIGHT © 2006 BY DART AEROSPACE LTD •
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.

Revision: **C**
Date: 07.02.20

- 3.4.7 Position the D2857-1/2 hinge brackets as shown in Figure 15(a) for the LH side and Figure 15(b) for the RH side. Transfer drill the $\varnothing 0.172$ " mounting holes on each bracket to the **Spacepod™** door. Install the hinge brackets as shown in Section J-J.

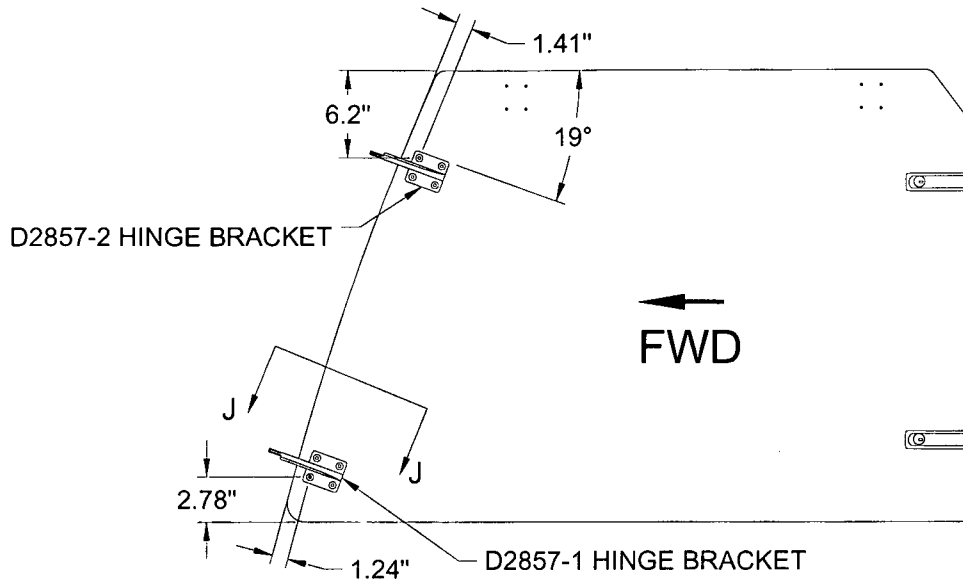


FIGURE 15(a). HINGE BRACKET POSITION ON LH D3186-1 SPACEPOD DOOR


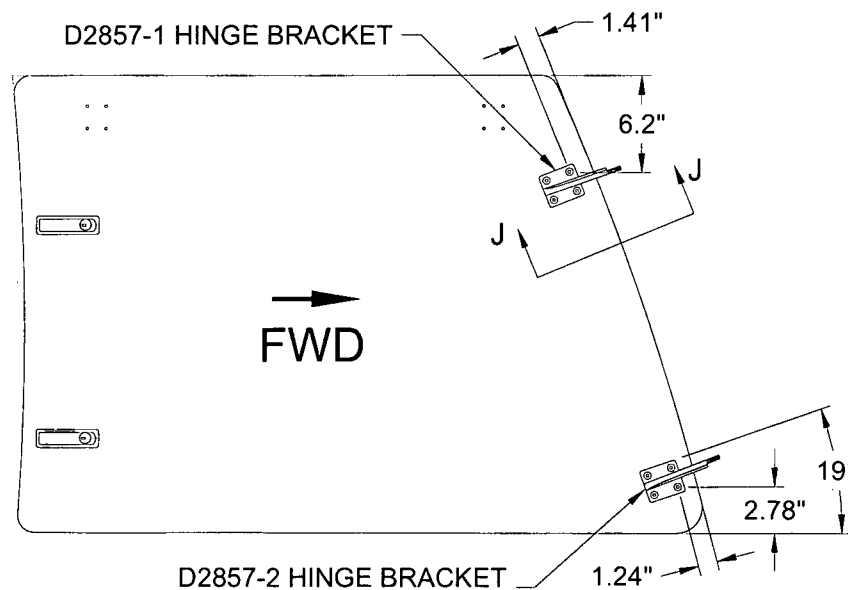


FIGURE 15(b). HINGE BRACKET POSITION ON RH D3186-2 SPACEPOD DOOR

SHOP COPY
RETURN TO
ENGINEERING
UNCONTROLLED COPY
SUBJECT TO AMENDMENT
WITHOUT NOTICE
WORK ORDER
NO. 35397

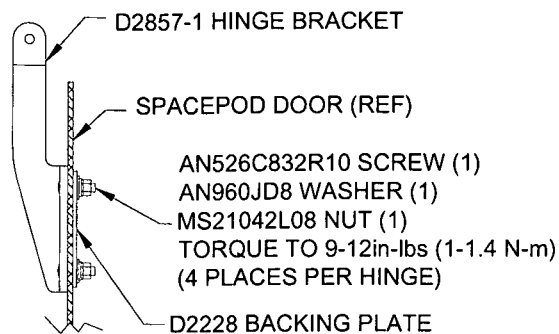

SECTION 'J-J' HINGE BRACKET INSTALLATION
(D2857-1 SHOWN; D2857-2 SIMILAR)

- 3.4.8 Install the D3557-1 bracket in the existing forward hinge mounting holes with the D2228 backing plates and the D3554-7 ball stud as shown in Figure 16.


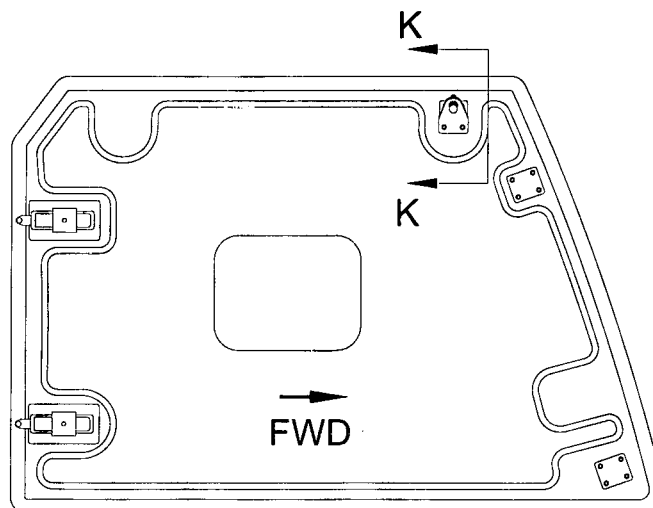


FIGURE 16. BRACKET AND BALL STUD INSTALLATION ON SPACEPOD DOOR
(INSIDE OF D3186-1 SHOWN; D3186-2 OPPOSITE)

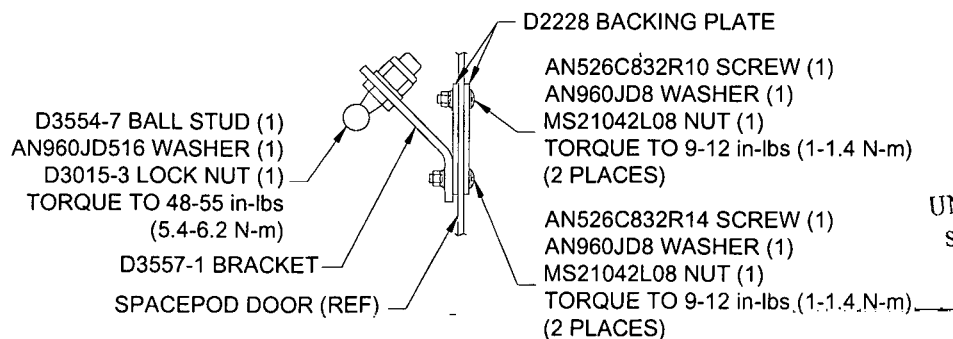

SHOP COPY
RETURN TO
ENGINEERING
UNCONTROLLED COPY
SUBJECT TO AMENDMENT
WITHOUT NOTICE
WORK ORDER
NO. 35397

SECTION 'K-K'

• COPYRIGHT © 2006 BY DART AEROSPACE LTD •
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.

Revision: **C**
Date: 07.02.20

- 3.4.9 Install the hinge brackets on the pod as shown in Figures 17(a) and 17(b):
- Assemble the D3538-1 hinge brackets with the D2857-1/-2 hinge brackets as shown in Figure 17(b). Position the door on the pod and transfer mark the mounting holes from the D3538-1 hinge brackets to the **Spacepod™** body.
 - Remove the door and drill Ø0.375" holes where marked. Remove the foam inner layer 0.250" around the hole between the inner and outer skins as shown in Figure 17(a).
 - Apply tape or an equivalent backer to the inner side of the holes to prevent epoxy filler from going through. Fill the cavity between the skins completely with Hysol 934NA mixed with milled glass fibers to in a ratio of 10:1 or Metalset A4. Allow the material to cure.
 - Reposition the **Spacepod™** door and hinges and transfer drill the Ø0.172" D3538-1 hinge bracket mounting holes to the pod.
 - Install the hinge brackets and **Spacepod™** door as shown in Figure 17(b).

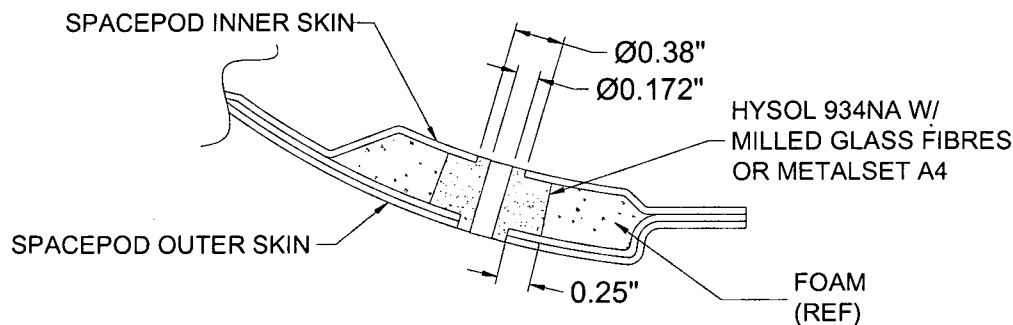


FIGURE 17(a). COMPOSITE MODIFICATION

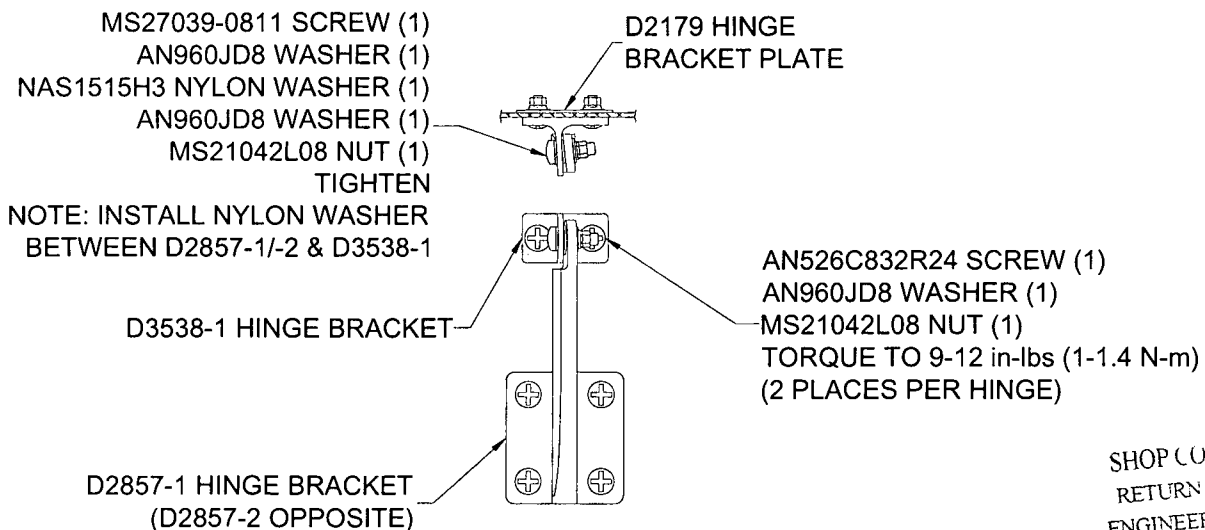


FIGURE 17(b). HINGE BRACKET INSTALLATION
(D2857-1 SHOWN; D2857-2 OPPOSITE)

SHOP COPY
RETURN TO
ENGINEERING
UNCONTROLLED COPY
SUBJECT TO AMENDMENT
WITHOUT NOTICE
WORK ORDER
NO. 35397

Date: Wednesday, 11/28/2007 8:24:27 AM
 User: Kim Johnston

Process Sheet

46

Customer	: CU-DAR001 Dart Helicopters Services	Drawing Name	: SPACEPOD ASSEMBLY LH/ DSI 9335
Job Number	: 35397		
Estimate Number	: 12775		
P.O. Number	:	Part Number	: D350600241
This Issue	: 11/28/2007 S.O. No. :	Drawing Number	: IIN REV.C PG11,18-21
Prsht Rev.	: NC	Project Number	: N/A
First Issue	: 10/25/2007 Type : SMALL /MED FAB	Drawing Revision	:
Previous Run	: 35395	Material	:
Written By	:	Due Date	: 11/15/2007 Qty: 1 Um: Each
Checked & Approved By	:		
Comment	: Est Rev:A 07.03.07 new issue ec		
	: est rev B 07.04.16 reformat,D3188 revE ec		

Additional Product

Job Number:



Seq. #:	Machine Or Operation:	Description :
---------	-----------------------	---------------

1.0	DC	DOCUMENT CONTROL
-----	----	------------------



Comment: DOCUMENT CONTROL

Photocopy bluefile and type labels as per PPP D350-600-241 CHG001

+DSI 9394

07.11.28

2.0	D31861	Spacepod Door, LH
-----	--------	-------------------



Comment: Qty.: 1.0000 Each(s)/Unit Total : 1.0000 Each(s)
 Spacepod Door, LH
 B

3.0	D31881	Spacepod Body
-----	--------	---------------



Comment: Qty.: 1.0000 Each(s)/Unit Total : 1.0000 Each(s)
 Spacepod Body
 B

REFERENCE ONLY

Job Completion



Date: Thursday, 12/21/2006 12:54:46 PM
 User: Kim Johnston

Process Sheet

Customer	: CU-DAR001 Dart Helicopters Services	Drawing Name	: SPACEPOD BODY LH
Job Number	: 30078		
Estimate Number	: 12595		
P.O. Number	: <i>N/A</i>	Part Number	: D31881M
This Issue	: 12/21/2006 S.O. No. : <i>N/A</i>	Drawing Number	: D3188 REV <i>BC LE 07-01-18</i>
Prsht Rev.	: NC	Project Number	: N/A
First Issue	: <i>N/A</i> Type : PURCHASED PARTS	Drawing Revision	: <i>BC LE 07-01-18</i>
Previous Run	: 30028	Material	: <i>N/A</i>
Written By	: <i>[Signature]</i>	Due Date	: 2/15/2007 Qty: 1 Um: Each
Checked & Approved By	: <i>[Signature] 061221</i>		
Comment	: Est Rev: A New issue ecn882 06-11-30 EC		

Additional Product

Job Number:



Seq. #:	Machine Or Operation:	Description :
---------	-----------------------	---------------

1.0	D2213	Aluminum Spacer
-----	-------	-----------------



Comment: Qty.: 8.0000 Each(s)/Unit Total : 8.0000 Each(s)
 Ship To Delastek

8	D2213	Spacer	Batch: <i>B 30049</i>
---	-------	--------	-----------------------

2.0	PG	PURCHASING
-----	----	------------



Comment: PURCHASING
 Issue P/O: *2771 C206112122*
 Description: D3188-1 BODY *①*
 Ship: D2213 Spacers
 Supplier: Delastek
 Conformity Certificate and Process sheet required
 Ship 2 Items from Previous steps *(41308)*

3.0	D31881P	Spacepod Body
-----	---------	---------------



Comment: Qty.: 1.0000 Each(s)/Unit Total : 1.0000 Each(s)
 Spacepod Body

4.0	PACKAGING 1	PACKAGING RESOURCE #1
-----	-------------	-----------------------



Comment: PACKAGING RESOURCE #1
 Receive and inspect for transit damage. Ensure a copy of certification of conformity and process sheet from Delastek is attached.

[Signature] 07/09/10

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: _____ PAR #: _____ Fault Category: _____ NCR: Yes No DQA: _____ Date: _____

QA: N/C Closed: _____ Date: _____

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries

Date: Thursday, 12/21/2006 12:54:47 PM
User: Kim Johnston

Process Sheet

Customer: CU-DAR001 Dart Helicopters Services

Drawing Name: SPACEPOD BODY LH

Job Number: 30078

Part Number: D31881M

Job Number:



Seq. #:

Machine Or Operation:

Description :

5.0

QC6

DIMENSIONAL CHECK



P70



Comment: DIMENSIONAL CHECK

Inspect dimensions as per Dwg D3188 .Visual inspection. Check for void spot and pins.

ml 07/11/02

6.0

PACKAGING 1

PACKAGING RESOURCE #1



Comment: PACKAGING RESOURCE #1

Identify and Stock

Location: GA

ml 07/11/02

7.0

QC21

FINAL INSPECTION/W/O RELEASE



Comment: FINAL INSPECTION/W/O RELEASE

①
D 07/12/06

Job Completion



U 07.12.06

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: _____ PAR #: _____ Fault Category: _____ NCR: Yes ☒ No ☐ DQA: ☒ Date: 07/12/20
 QA: N/C Closed: _____ Date: _____

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			
07.11.20	5.0	Qty pods have rib too thick. (section CC on dwg)	LE 07.11.20 QS1042	Acceptable. Substitute fasteners at assembly.	LE 07.11.20 QS1042	07.11.20	LE 07.11.20 QS1042	07.11.20

NOTE: Date & initial all entries

DART

DESIGN	DRAWN BY	DART AEROSPACE LTD	REV. C
JB	LE	HAWKESBURY, ONTARIO, CANADA	
CHECKED PH	APPROVED PH	DRAWING NO.	SHEET 1 OF 11
DATE 06.12.13		TITLE SPACEPOD BODY	SCALE NTS
A	03.04.03	NEW ISSUE	
B	06.10.06	UPDATED DWG TO MATCH PRODUCT ADDED D3188-1M/-2M/-3M/-5/-6/-7	
C	06.12.13	REMOVED D0600-XXX LABELS	

GENERAL NOTES:

1. REFERENCE DIMENSIONS MATCH AIRCRAFT CONTOUR AND DOOR OPENING
2. LAMINATE PER DART QSI 006. LAMINATION SCHEDULE PER THIS DRAWING
3. MATERIALS:

RESIN: EPOCAST 50-A/9816 OR DERAKANE 470-36/411/510A40

FIBER: 9.7 oz 7781 WEAVE "S" GLASS (9 oz SATIN)
12 oz UNIDIRECTIONAL FIBERGLASS ("12 OZ UNIDIRECTIONAL")
18 oz ROVING "E" GLASS (18 oz CLOTH)
OWENS CORNING MILLED FIBERS, "E" GLASS
3M K20 GLASS BUBBLES

FOAM: A500 CORE CELL
OR DIVINYCELL
OR AIREX
OR KLEGECELL
FILL VOIDS IN FOAM WITH PASTE MADE FROM MILLED FIBERS & RESIN

4. MOLD SHEDULE:

PART	LAYUP	TRIM AND DRILL
D3188-1M/-1/-5	DT8003	DT8501
D3188-2M/-2/-6	DT8004	DT8502
D3188-3M/-3/-7	DT8500	DT8501






5. APPLY ANTI-SKID PAINT TO TOP SURFACE OF PODS PER QSI 005 4.4
6. FINISH: INSIDE/OUTSIDE WITH GREY DUPONT HIGHBUILD PRIMER 1144-S
7. ALL DIMENSIONS ARE IN INCHES
8. TOLERANCES ARE PER DART QSI 018 UNLESS OTHERWISE NOTED

SHOP COPY
RETURN TO
ENGINEERING
UNCONTROLLED COPY
SUBJECT TO AMENDMENT
WITHOUT NOTICE
WORK ORDER
NO. 30078

RELEASED
06.12.22

DART

DESIGN JB	DRAWN BY LE	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
CHECKED PH	APPROVED 	DRAWING NO. D3188	REV. C SHEET 2 OF 11
DATE 06.12.13	TITLE SPACEPOD BODY		SCALE NTS

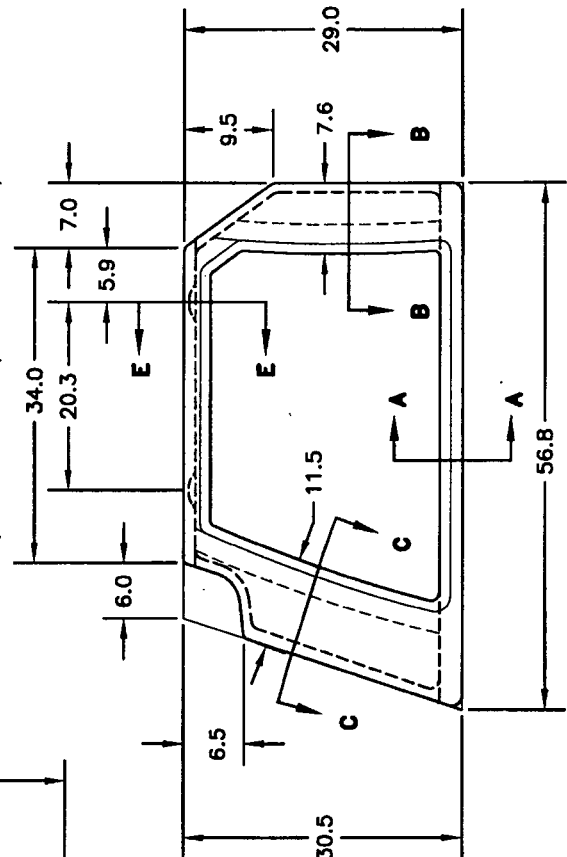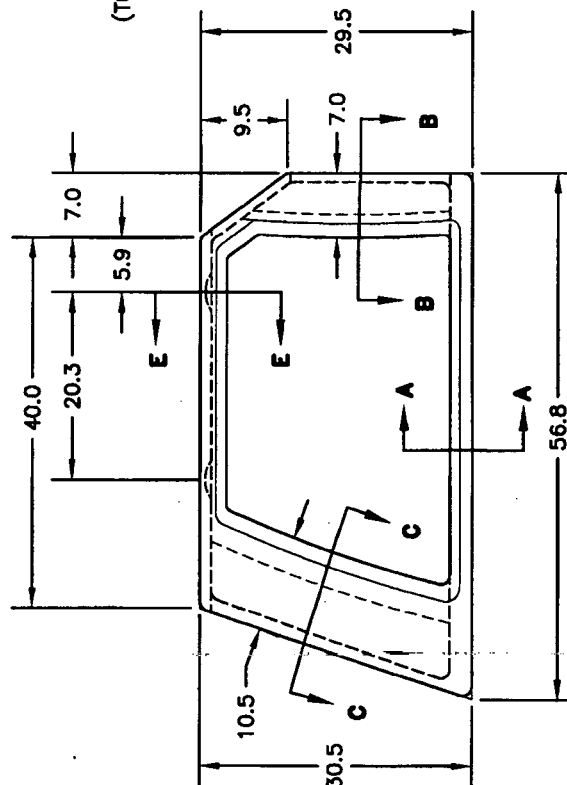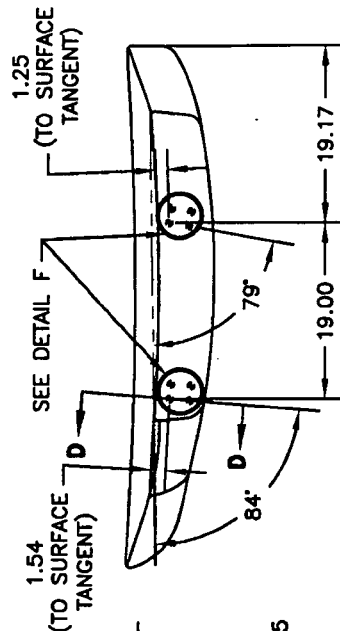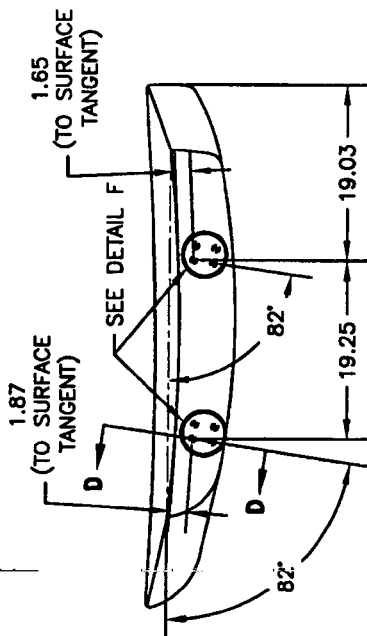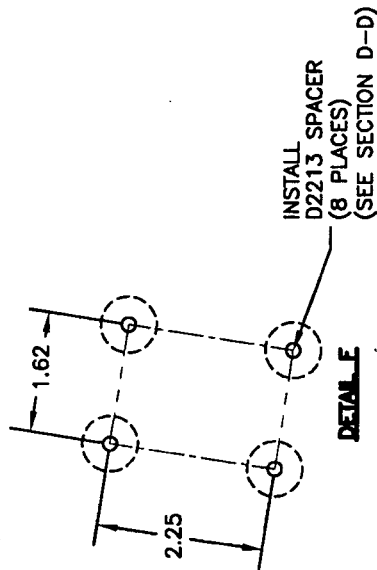**D3188-3M SPACEPOD BODY****D3188-1M SPACEPOD BODY**

SHOP COPY
RETURN TO
ENGINEERING
UNCONTROLLED COPY
SUBJECT TO AMENDMENT
WITHOUT NOTICE
WORK ORDER
NO. **30078**

RELEASED
06-12-22


SEE SHEET #4 FOR SECTION VIEWS

Copyright © 2003 by DART AEROSPACE LTD

THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.



DESIGN JB	DRAWN BY LE	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
CHECKED PH	APPROVED <i>[Signature]</i>	DRAWING NO. D3188	REV. C SHEET 3 OF 11
DATE 06.12.13		TITLE SPACEPOD BODY	SCALE NTS

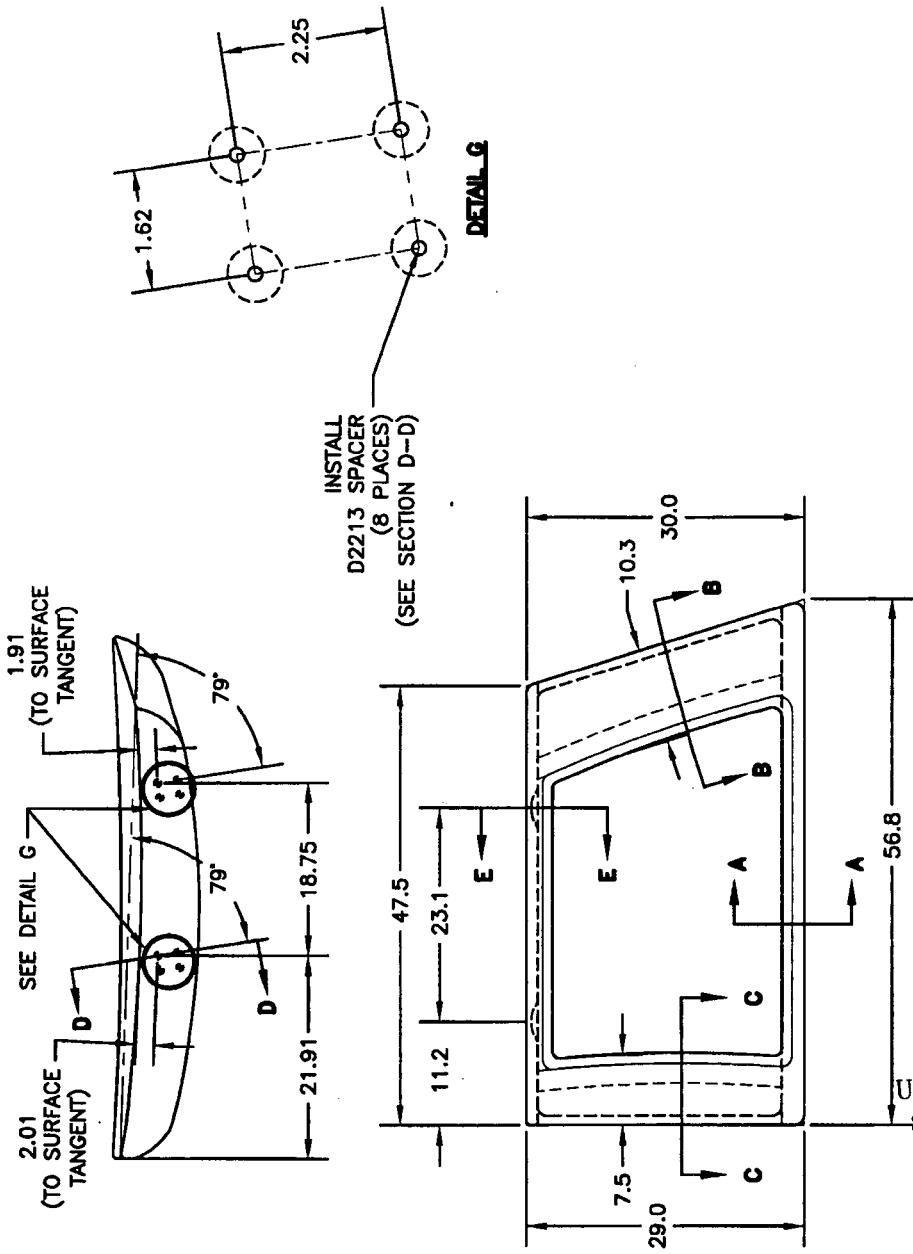

D3188-2M SPACEPOD BODY

SHOP COPY
RETURN TO
ENGINEERING
UNCONTROLLED COPY
SUBJECT TO AMENDMENT
WITHOUT NOTICE
WORK ORDER
NO. 30078


NOTE:
SEE SHEET #4 FOR SECTION VIEWS

RELEASED
[Stamp]

Copyright © 2003 by DART AEROSPACE LTD

THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.

DESIGN	DRAWN BY		DART AEROSPACE LTD	
JB	LE		HAMKESBURY, ONTARIO, CANADA	
CHECKED	APPROVED	DRAWING NO.		REV. C
PH	PH	D3188		SHEET 4 OF 11
DATE	TITLE		SCALE	
06.12.13	SPACEPOD BODY		MTS	



Copyright © 2003 by DART AEROSPACE LTD

THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL, AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.



Copyright © 2003 by DART AEROSPACE LTD

DECLASSIFIED
DATE 06-12-22 BY *[signature]*



DESIGN JB	DRAWN BY LE	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
CHECKED PH	APPROVED [Signature]	DRAWING NO. D3188	REV. C SHEET 5 OF 11
DATE 06.12.13		TITLE SPACEPOD BODY	SCALE NTS

RELEASED
06.12.22

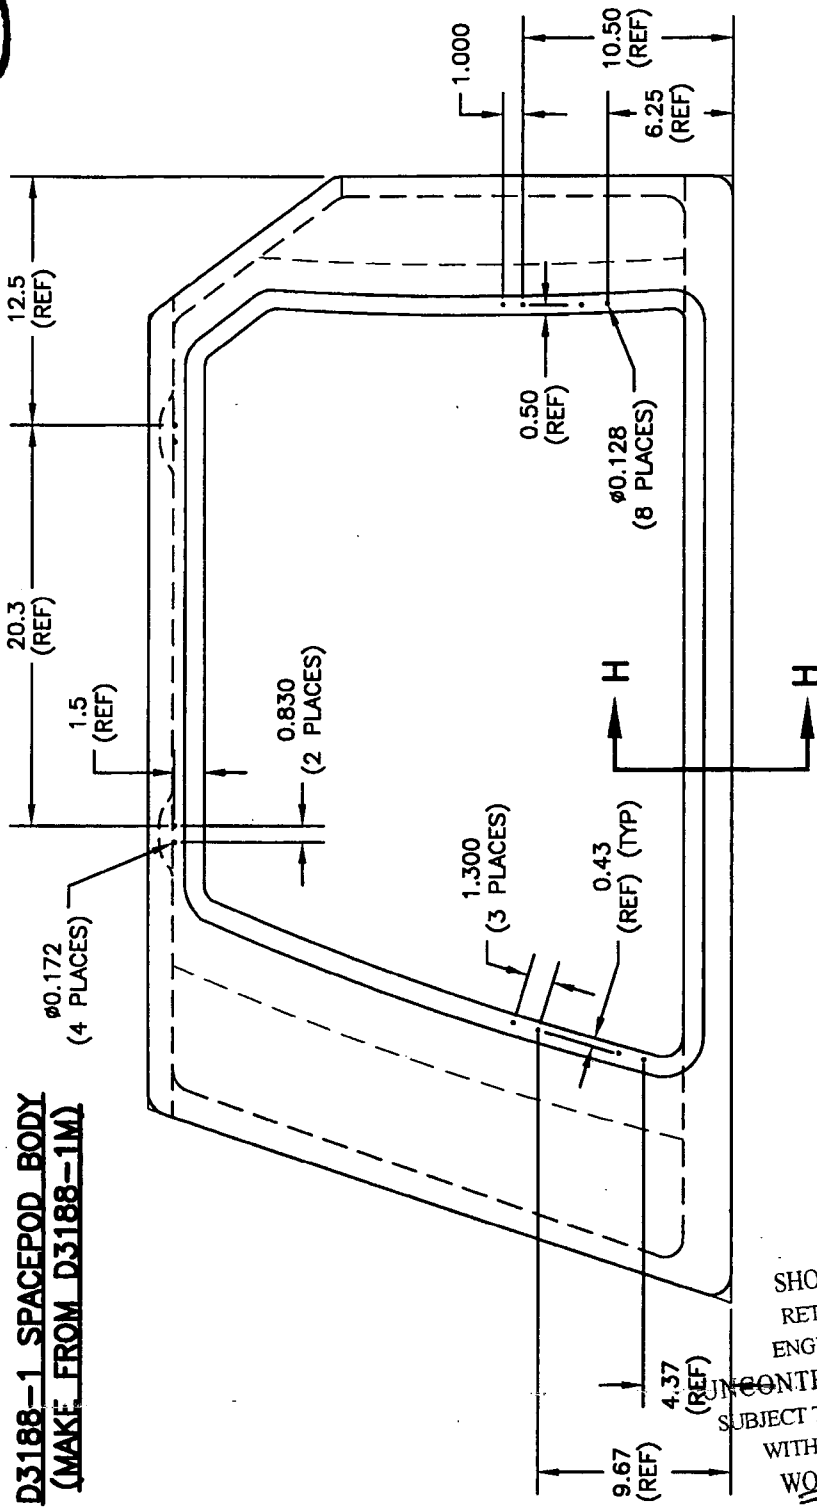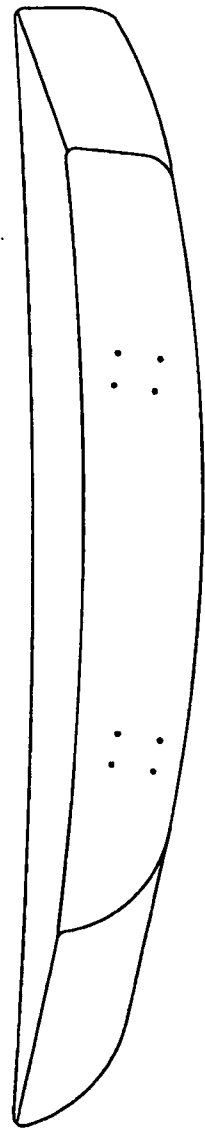

D3188-1 SPACEPOD BODY
(MAKE FROM D3188-1M)

- NOTES:
- 1) REFERENCE DIMENSIONS REPRESENT HOLES WHICH ARE TRANSFER DRILLED FROM D3186-1 DOOR DURING ASSEMBLY
 - 2) SEE SHEET #11 FOR SECTION VIEW

SHOP COPY
RETURN TO
ENGINEERING
UNCONTROLLED COPY
SUBJECT TO AMENDMENT
WITHOUT NOTICE
WORK ORDER
NO. 30078

Copyright © 2003 by DART AEROSPACE LTD



THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.



DESIGN JB	DRAWN BY LE	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
CHECKED PH	APPROVED [Signature]	DRAWING NO. D3188	REV. C SHEET 6 OF 11
DATE 06.12.13	TITLE SPACEPOD BODY		SCALE NTS

RELEASED
06.12.22

**D3188-2 SPACEPOD BODY
(MAKE FROM D3188-2M)**

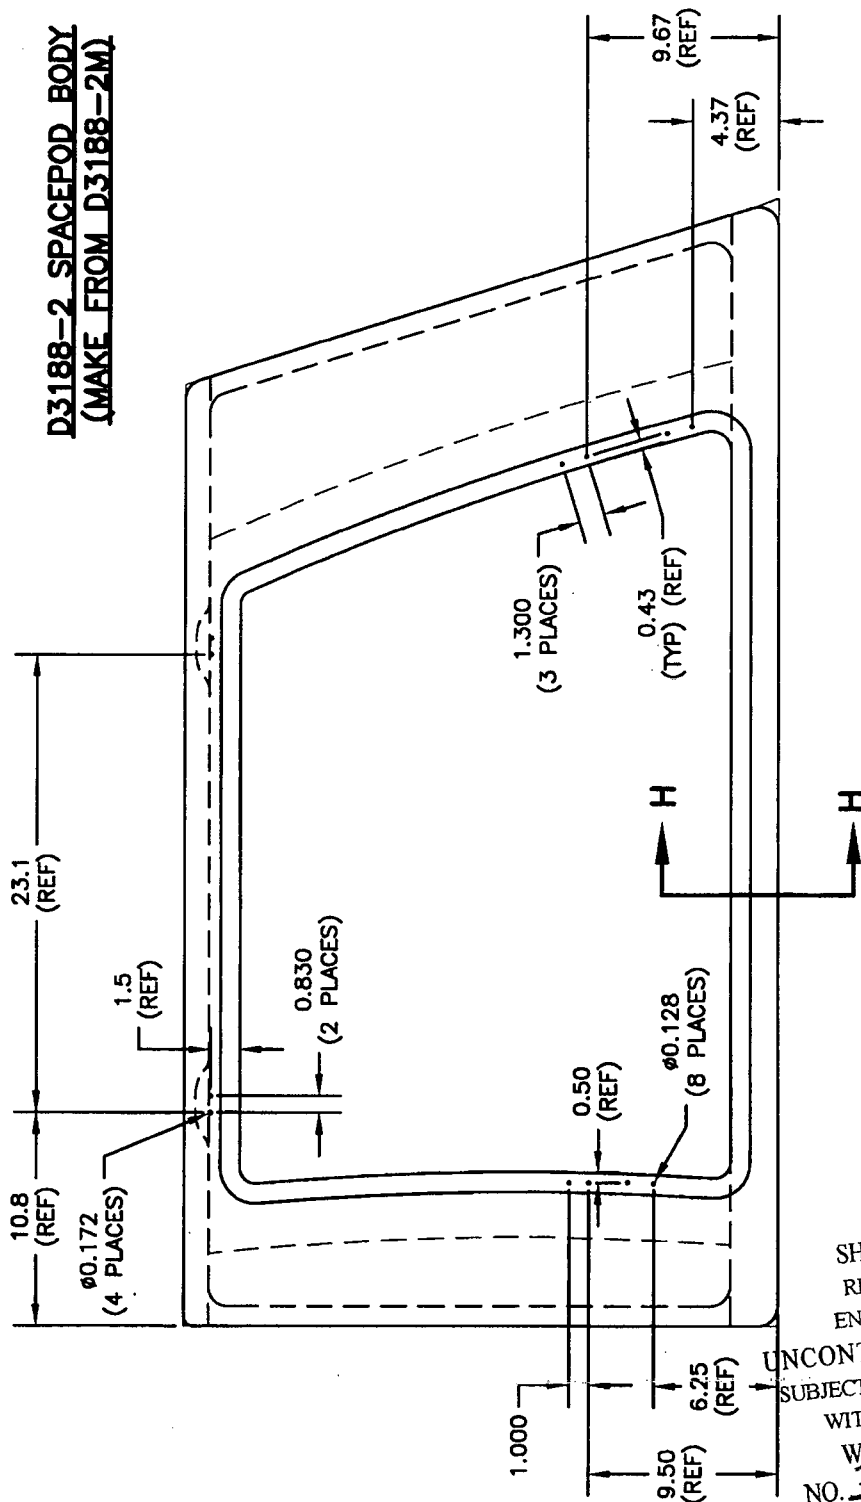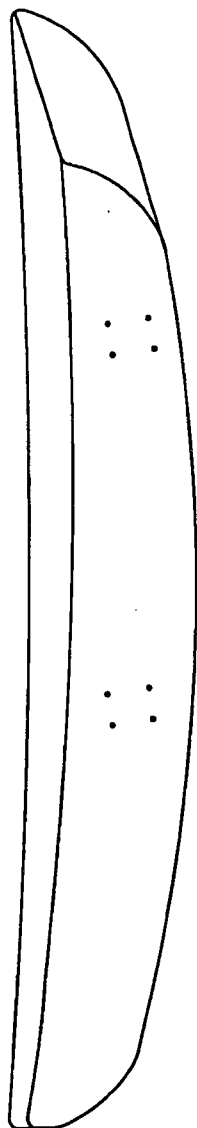

NOTES:

SHOP RETURN TO
ENGINEERING

UNCONTROLLED COPY
SUBJECT TO AMENDMENT
WITHOUT NOTICE

WORK ORDER
NO. 30078

REFERENCE DIMENSIONS REPRESENT HOLES WHICH ARE
TRANSFER DRILLED FROM D3186-2 DOOR DURING ASSEMBLY
2) SEE SHEET #11 FOR SECTION VIEW


Copyright © 2003 by DART AEROSPACE LTD

THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.




DESIGN JB	DRAWN BY LE	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
CHECKED PH	APPROVED H	DRAWING NO. D3188	REV. C SHEET 7 OF 11
DATE 06.12.13	TITLE SPACEPOD BODY		SCALE NTS

RELEASED
06.12.22

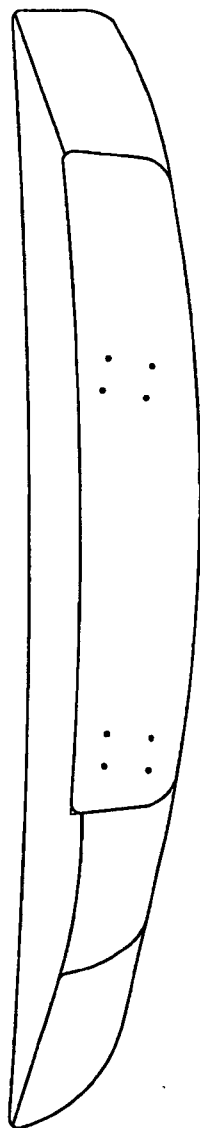

**D3188-3 SPACEPOD BODY
(MAKE FROM D3188-3M)**

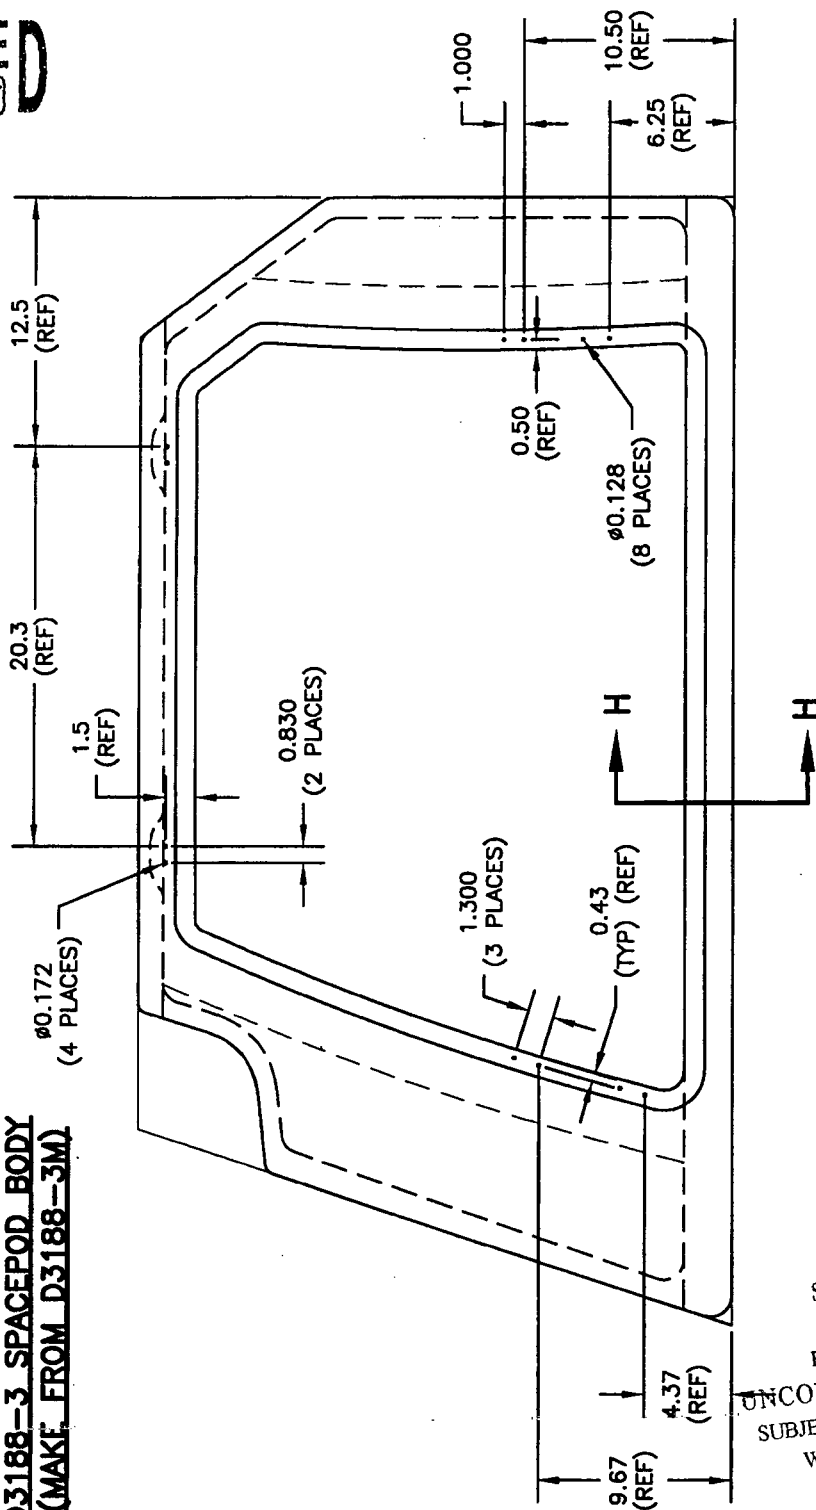

NOTES:

- 1) REFERENCE DIMENSIONS REPRESENT HOLES WHICH ARE TRANSFER DRILLED FROM D3186-1 DOOR DURING ASSEMBLY
- 2) SEE SHEET #11 FOR SECTION VIEW

SHOP COPY
RETURN TO
ENGINEERING
UNCONTROLLED COPY
SUBJECT TO AMENDMENT
WITHOUT NOTICE
WORK ORDER
NO. 30078

Copyright © 2003 by DART AEROSPACE LTD



THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.



DESIGN JB	DRAWN BY LE	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
CHECKED PH	APPROVED [Signature]	DRAWING NO. D3188	REV. C SHEET 8 OF 11
DATE 06.12.13	TITLE SPACEPOD BODY		SCALE NTS

RELEASED
06.12.22

D3188-5 SPACEPOD BODY
(MAKE FROM D3188-1M)

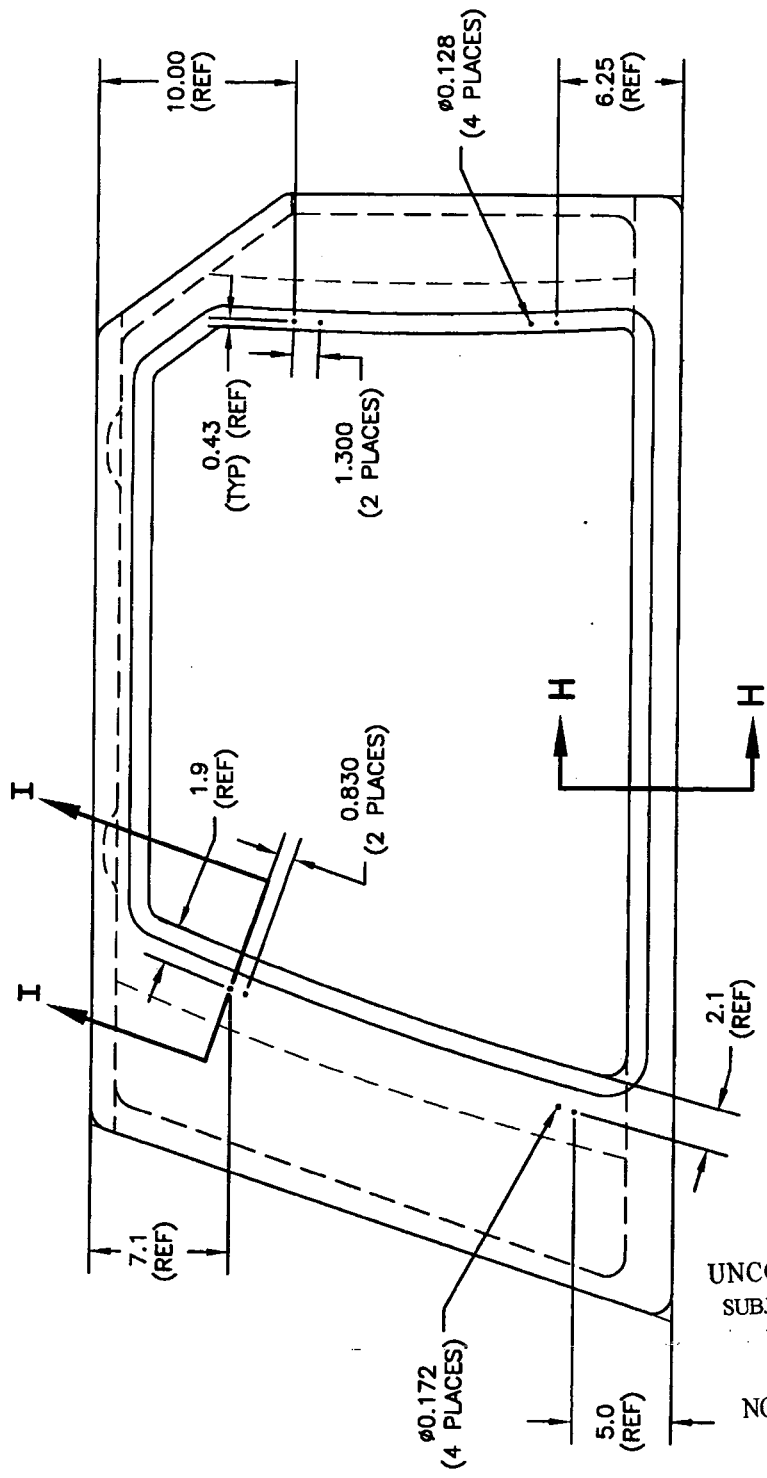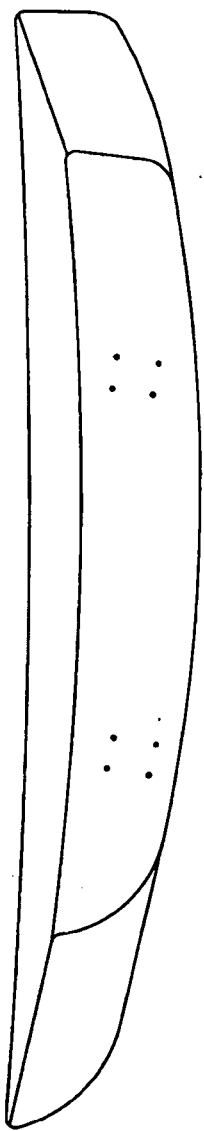

NOTES:
1) REFERENCE DIMENSIONS REPRESENT HOLES WHICH ARE
TRANSFER DRILLED FROM D3186-3 DOOR DURING ASSEMBLY
2) SEE SHEET #11 FOR SECTION VIEWS

SHOP COPY
RETURN TO
ENGINEERING
UNCONTROLLED COPY
SUBJECT TO AMENDMENT
WITHOUT NOTICE
WORK ORDER
NO. 30078

Copyright © 2003 by DART AEROSPACE LTD



THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.

DART

DESIGN JB	DRAWN BY LE	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
CHECKED PH	APPROVED [Signature]	DRAWING NO. D3188	REV. C SHEET 9 OF 11
DATE 06.12.13	TITLE SPACEPOD BODY		SCALE NTS

RELEASED
06.12.22 [Signature]

D3188-6 SPACEPOD BODY
(MAKE FROM D3188-2M)

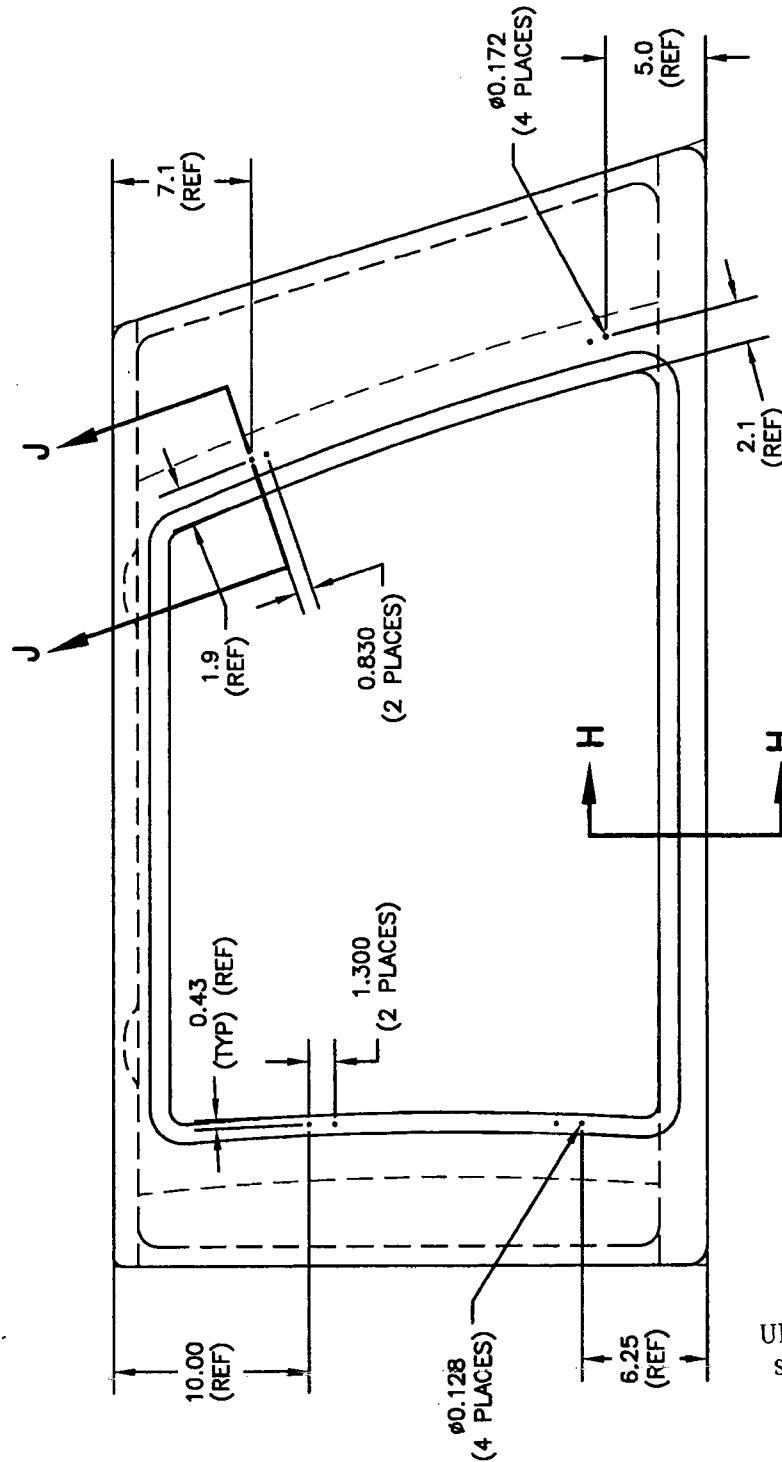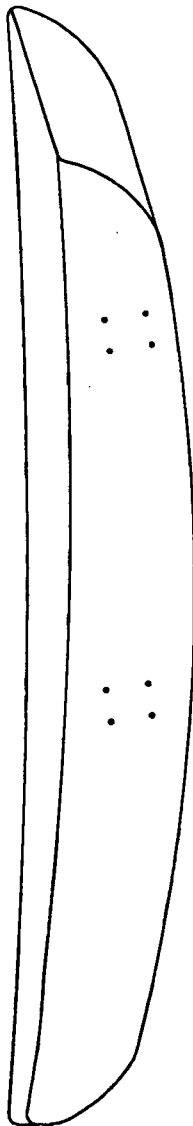**NOTES:**

- 1) REFERENCE DIMENSIONS REPRESENT HOLES WHICH ARE TRANSFER DRILLED FROM D3186-4 DOOR DURING ASSEMBLY
- 2) SEE SHEET #11 FOR SECTION VIEWS

SHOP COPY
RETURN TO
ENGINEERING
UNCONTROLLED COPY
SUBJECT TO AMENDMENT
WITHOUT NOTICE
WORK ORDER
NO. 30078

Copyright © 2003 by DART AEROSPACE LTD



THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.



DESIGN JB	DRAWN BY LE	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
CHECKED PH	APPROVED #	DRAWING NO. D3188	REV. C SHEET 10 OF 11
DATE 06.12.13	TITLE SPACEPOD BODY		SCALE NTS

RELEASED
06.12.22

D3188-7 SPACEPOD BODY
(MAKE FROM D3188-3M)

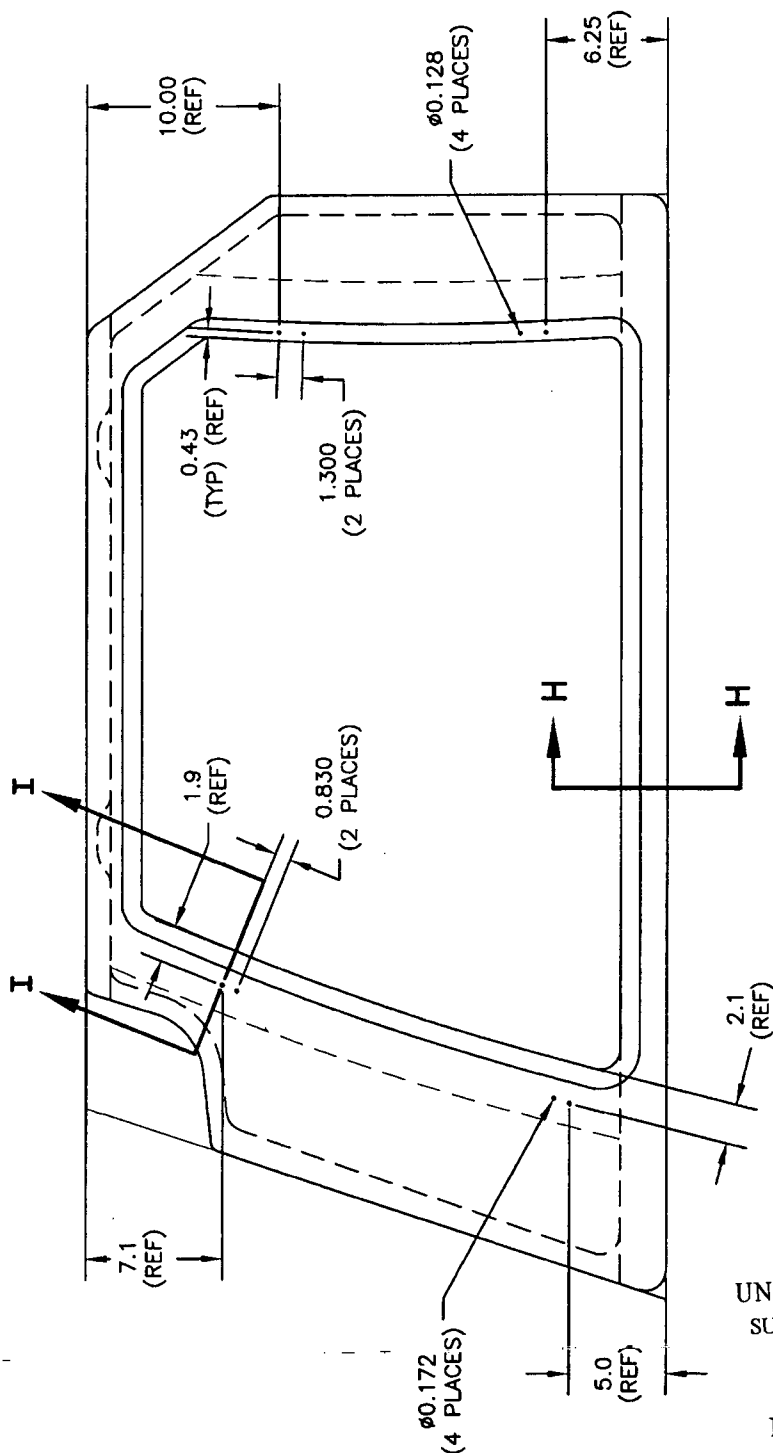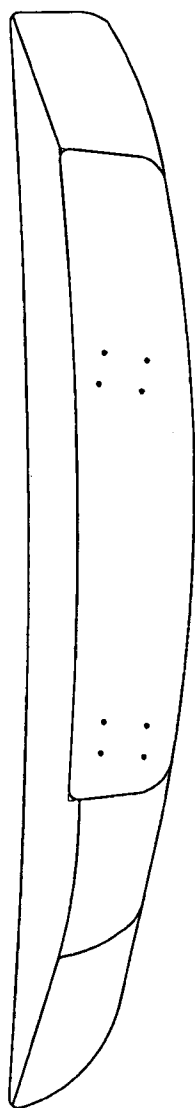

NOTE:
1) REFERENCE DIMENSIONS REPRESENT HOLES WHICH ARE
TRANSFER DRILLED FROM D3186-3 DOOR DURING ASSEMBLY
2) SEE SHEET #11 FOR SECTION VIEWS

SHOP COPY
RETURN TO
ENGINEERING
UNCONTROLLED COPY
SUBJECT TO AMENDMENT
WITHOUT NOTICE
WORK ORDER
NO. 30078

Copyright © 2003 by DART AEROSPACE LTD

THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.



DESIGN JB	DRAWN BY LE	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
CHECKED PH	APPROVED [Signature]	DRAWING NO. D3188	REV. C SHEET 11 OF 11
DATE 06.12.13		TITLE SPACEPOD BODY	SCALE NTS


RELEASED
06.12.22

INSTALL AKS7-1032-130
INSERTS (29 PLACES)
PER D3188-1T1 (D3188-1/-3/-5/-7)
OR D3188-2T1 (D3188-2/-6)

FOAM
(REF)



SECTION H-H
(TYPICAL FLOOR SECTION)

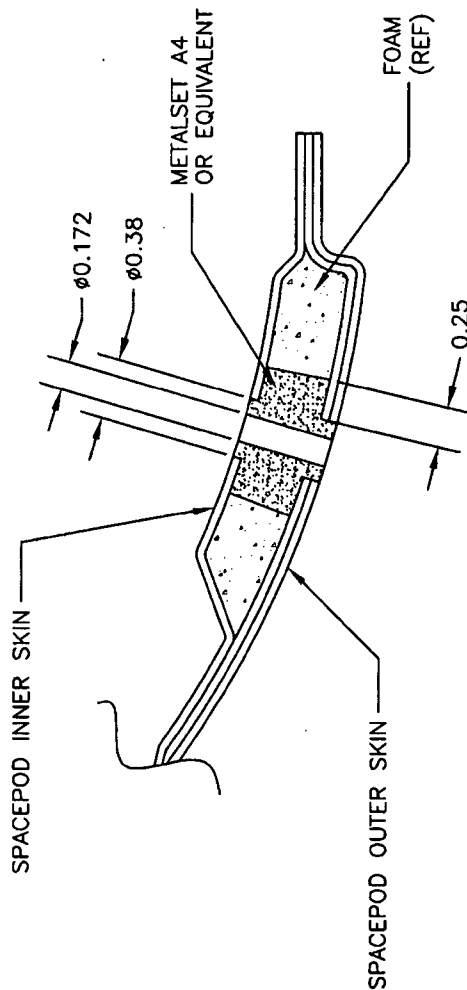

SECTION I-I
(SECTION J-J OPPOSITE)
(4 PLACES PER POD)

SHOP COPY
RETURN TO
ENGINEERING
UNCONTROLLED COPY
SUBJECT TO AMENDMENT
WITHOUT NOTICE
WORK ORDER
NO. 30078

Copyright © 2003 by DART AEROSPACE LTD

THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.



DELASTEK COMPOSITES INC.
2699, 5ième Avenue
Local 14, PORTE -A-
Grand-Mère, Québec G9T 5K7
Can **Fax (819) 533-3494 **

PACKING SLIP CERTIFICATE OF COMPLIANCE

Invoice #	12145
Customer #	DART

Telephone: (819) 533-5788

Warehouse: MAIN

Bill to:

Dart Aerospace Ltd.
1270, Aberdeen Street
Hawkesbury, Ontario K6A 1K7
Canada

Ship to:

Dart Aerospace Ltd.
1270, Aberdeen Street
Hawkesbury, Ontario K6A 1K7
Canada

Telephone: 613-632-3336

Contact: Linda Lacelle

Ship via		F.O.B.		Terms		Salesperson	
EPIC EXPRESS COLLECT		Origin		Net30 days		Claude Lessard, ext. 233	
Ship date	Order Date	Our PO #	Order by	Your PO #		GST/PST #	
05/09/2007	22/12/2006	5093	G. Lavoie	PO00002771			
Order Qty	B.O. Qty	Current Ship.	Item #	Item Description			
1	0	1	DKC134-0054	D3186-2M Spacepod Door RH B30083 Dwg. Rév.: D Job: 42018 U de M : Each			
1	0	1	DKC134-0055	D3188-2M Spacepod Body RH B30088 Dwg. Rév.: D Job: 41316 U de M : Each			
1	0	1	DKC134-0052	D3186-1M Spacepod Door LH B30073 Dwg. Rév.: D Job: 41325 U de M : Each			
1	0	1	DKC134-0053	D3188-1M Spacepod Body LH B30078 Dwg. Rév.: D Job: 41308 U de M : Each			

It is hereby certified that all materials, process and finished items were controlled and tested in accordance with the requirements of the purchase order and applicable specifications. All such records are on file at our plant and available for review upon request.

☒ Cust. ☐ Adm. ☐ Quality ☐ Ship.

Accepted by:

Michel St/And

Quality department

AQ-357



Feuille de Procédé

Client	: DART	Dart Aerospace Ltd.	Nom Dessin	: SPACEPOD BODY
Numéro Job	: 41308		Numéro Article	: DKC134-0053
Numéro Soumission	: 2585		Numéro Dessin	: D3188
Numéro B.A.	:		Projet Numéro	: DKC134
Cette fois	: 2007-03-29	No. B.V. :	Révision dessin	: C
Prsht Rev.	: NC		Matériel	: Fibre 7781 et Résine 411-350
Prem. fois	:	Type :	Date Dûe	: 2007-04-05
Job précédente	: 41307		Qté:	1 Udm. UNITE
Écrit par	:			
Vérifié & Approuvé par	:			
Commentaires	:	N° de pièce Dart Aerospace : D31881M		



Process Sheet Rev.: 01 Modification générale selon informations de l'ingénierie.

Produit additionnel

Numéro Job:



# Séq.:	Machine ou Opération:	Description :
---------	-----------------------	---------------

1.0	AC003	Frekote 44NC
-----	-------	--------------

Commentaire Qty.: 0.050 UNITE(s)/Unit Total : 0.050 UNITE(s)

Frekote 44NC

2.0	PRÉPARATION 3	PRÉPARATION DU MATÉRIEL DART
-----	---------------	------------------------------



Commentaire Setup: 0.00Hrs/ Run: 5.0000Min Total Run : 0.0833Hrs

PRÉPARATION DU MOULE

Effectuer la préparation du moule N° DT 8003 à l'aide de Frekote 44NC et laisser sécher pendant 3 heures selon QSI-005.

JUG 14 2007

Heure Début: 7:30 Heure Fin: 10:00 Sceau:



3.0	AC009	Tissu à délaminer Release ply B
-----	-------	---------------------------------

Commentaire Qty.: 9.84 VERGE(s)/Unit Total : 9.84 VERGE(s)

Tissu à délaminer Release ply B

4.0	AC0407	Wrightlon 5200 Bleu P3
-----	--------	------------------------

Commentaire Qty.: 9.27 VERGE(s)/Unit Total : 9.27 VERGE(s)

Wrightlon 5200 Bleu P3

5.0	AC0408	Feutre de drainage N° Airweave N 10
-----	--------	-------------------------------------

Commentaire Qty.: 6.00 VERGE(s)/Unit Total : 6.00 VERGE(s)

Feutre de drainage N° Airweave N 10

6.0	AC002	Stretchlon 200 poche à vide Vert
-----	-------	----------------------------------

Commentaire Qty.: 7.00 VERGE(s)/Unit Total : 7.00 VERGE(s)

Stretchlon 200 poche à vide Vert

Utilisateur: Marc Dubé

Feuille de Procédé

Cliant: DART Dart Aerospace Ltd.
Numéro Job: 41308

Nom Dessin: SPACEPOD BODY
Numéro Article: DKC134-0053

Numéro Job:



- # Séq.: Machine ou Opération: Description :

7.0 AAC0681 9.7 oz Weave #FG-778150-125Y Volan Finish

Commentair Qty.: 11.400 VERGE(s)/Unit Total: 11.400 VERGE(s)
9.7 oz Weave #FG-778150-125Y Volan Finish

#LOT: 1-6170-2

8.0 AC0098 Ruban à gommer jaune #: T/AT-200Y

Commentair Qty.: 4.0000 RL(s)/Unit Total: 4.0000 RL(s)
Ruban à gommer jaune #: T/AT-200Y

9.0 AACQ443 Fiberglass 12 oz Unidirectional

Commentair Qty.: 0.80 VERGE(s)/Unit Total: 0.80 VERGE(s)
Fiberglass 12 oz Unidirectional

N° de Lot: 1-5964-1

10.0 AAC0633 WR1850 ROVING 18 OZ x 50°

Commentair Qty.: 0.35 VERGE(s)/Unit Total: 0.35 VERGE(s)
WR1850 ROVING 18 OZ x 50°

N° de Lot: 1-6113-3

11.0 PRÉPARATION 3 PRÉPARATION DU MATÉRIEL DART



Commentair Setup: 0.00Hrs/ Run: 45.0000Min Total Run: 0.7500Hrs
TAILLAGE DU MATÉRIEL

Tailler le matériel, selon les différents patrons de découpe et les quantités inscrites sur ceux-ci.

À fin d'accélérer le processus de taillage, tailler les plis de 9.7 oz tous en même temps en les superposants les uns sur les autres.

Date: 4/06/07 Heure Début: 8:00 Heure Fin: 12:00 Sceau:



12.0 AAC0275 Catalyst N° DDM-9

Commentair Qty.: 0.0640 PINTE(s)/Unit Total: 0.0640 PINTE(s)
Catalyst N° DDM-9

N° de Lot: 1-6118-3

13.0 AAC0324 Résine (411B7530) 411-350 promo. 75min.

Commentair Qty.: 2.000 KILOGRAMME(s)/Unit Total: 2.000 KILOGRAMME(s)
Résine (411B7530) 411-350 promo. 75min.

N° de Lot: 1-6251-1

14.0 AAC0673 Fibre de verre Miapoxy 66

Commentair Qty.: 0.0039 GALLON(s)/Unit Total: 0.0039 GALLON(s)
Fibre de verre Miapoxy 66

N° de Lot: 1-5562-1

15.0 PRÉPARATION 3 PRÉPARATION DU MATÉRIEL DART



Commentair Setup: 0.00Hrs/ Run: 5.0000Min Total Run: 0.0833Hrs
PRÉPARATION DU MATÉRIEL

Faire la préparation de la résine selon les quantité requises, mix ration 1.5% de Catalyst N° DDM-9 par quantité de résine N° 411-350.

Utilisateur: Marc Dubé

Feuille de Procédé

Client: DART Dart Aerospace Ltd.

Nom Dessin: SPACEPOD BODY

Numéro Job: 41308

Numéro Article: DKC134-0053

Numéro Job:



Séq.:

Machine ou Opération:

Description:

Préparer une seringue rempli de 30 ml de résine chargé de fibre dde verre Mia Poxi 66.

Date: AUG 15 2007

Heure Début: 10:45

Heure Fin: 10:50

Sceau:



16.0

LAMINAGE.

LAMINAGE PIÈCE DART



Commentair Setup: 0.00Hrs/ Run: 90.0000Min Total Run : 1.5000Hrs

FAIRE LE LAMINAGE DES TISSUS

À l'aide de la seringue. Faire un joint tout autour de la dénivellation pour la porte directement dans le moule.

À l'aide d'un rouleau 2" dia. appliquer une couche de résine N° 411-350 sur le moule N° DT 8003 et ensuite imbiber un pli de tissu 9.7oz. et un 18 oz. sur la section supérieur de la pièces.

Laminage du 12 oz.

Recommencer l'opération pour le deuxième pli.

Date: AUG 15 2007

Heure Début: 10:50

Heure Fin: 11:30

Sceau:



17.0

POCHE À VIDE 1

FAIRE LA POCHE À VIDE



Commentair Setup: 0.00Hrs/ Run: 15.0000Min Total Run : 0.2500Hrs

FAIRE LA POCHE À VIDE

Faire la poche à vide en appliquant les composantes dans l'ordre suivant:

- 1- Tissu à délaminer
- 2- Film Perforé P-3
- 3- Feutre de drainage.
- 4- Sac à vide Stretchlon 200

Laisser sécher pendant 4 heures Minimum.

Date: AUG 15 2007

Heure Début: 11:30

Heure fin: 11:50

Sceau:



Curing Début: 10:50 Curing Fin: 4:00

18.0

AAC0457

ATC core-cell A500 plain 4'x8' 1" thick

Commentair Qty.: 0.75 FEUILLE(s)/Unit Total : 0.75 FEUILLE(s)

ATC core-cell A500 plain 4'x8' 1" thick Selon dessin D3188 de Dart

N° de Lot:

3-5915-2

Feuille de Procédé

Client: DART Dart Aerospace Ltd.

Nom Dessin: SPACEPOD BODY

Numéro Job: 41308

Numéro Article: DKC134-0053

Numéro Job:




Séq.: Machine ou Opération: Description:

19.0

FAB GÉNÉRALE 3

FABRICATION GÉNÉRALE DART

Commentaire Setup: 0.00Hrs/ Run: 120.0000Min Total Run : 2.0000Hrs
TAILLAGE DU MATÉRIEL

Tailler et le Foam Core 1" selon plan de découpe et gabarits

Date: AUG 16 2007 Heure Début: 7:30 Heure Fin: 12:00 Sceau:

20.0

AAC0324

Résine (411B7530) 411-350 promo. 75min.

Commentaire Qty.: 0.200 KILOGRAMME(s)/Unit Total : 0.200 KILOGRAMME(s)
Résine (411B7530) 411-350 promo. 75min.N° de Lot: 1-6251-1

21.0

AAC0275

Catalyst N° DDM-9

Commentaire Qty.: 0.0064 PINTE(s)/Unit Total : 0.0064 PINTE(s)
Catalyst N° DDM-9N° de Lot: 1-6118-3

22.0

FINITION 3

FINITION PIÈCE DART

Commentaire Setup: 0.00Hrs/ Run: 0.0000Min Total Run : 0.0000Hrs
FINITION PIÈCE DART

AUG 16 2007



Prendre les deux pièces de 11" x 57" et sceller 1 grande surface sur chacune d'elle selon I.G. # Sceller le Foam Core.

23.0

AAC0452

Polybond B46F

Commentaire Qty.: 0.010 KIT(s)/Unit Total : 0.010 KIT(s)
Polybond B46FN° de Lot: 1-6177-1

24.0

FINITION 3

FINITION PIÈCE DART

Commentaire Setup: 0.00Hrs/ Run: 0.0000Min Total Run : 0.0000Hrs
FINITION PIÈCE DART

À l'aide de polybond, coller ensemble les deux surfaces scellées

Disposer des poids sur les pièces pour conserver une pression de collage.

Laisser sécher 2 heures minimum.

Quantité: 1 Date: AUG 16 2007 Sceau:

Date: Jeudi, 2007-03-29 10:33:12

Utilisateur: Marc Dubé

Feuille de Procédé

Client: DART Dart Aerospace Ltd.

Nom Dessin: SPACEPOD BODY

Numéro Job: 41308

Numéro Article: DKC134-0053

Numéro Job:




Séq.: Machine ou Opération: Description:

30.0 AAC0452 Polybond B46F

Commentair Qty.: 0.078 KIT(s)/Unit Total: 0.078 KIT(s)
Polybond B46F N° de Lot: 1-6177-1

31.0 PRÉPARATION 3 PRÉPARATION DU MATÉRIEL DART



Commentair Setup: 0.00Hrs/ Run: 5.0000Min Total Run: 0.0833Hrs
PRÉPARATION DU MATÉRIEL

Faire la préparation du Polybond.

Date: AUG 20 2007

Heure Début: 9:15

Heure Fin: 9:20

Sceau:



32.0 ASSEMBLAGE 3 ASSEMBLAGE GÉNÉRALE DART



Commentair Setup: 0.00Hrs/ Run: 60.0000Min Total Run: 1.0000Hrs
ASSEMBLAGE GÉNÉRALE DES PIÈCES

Coller les différents pièces de Foam Core dans les Spacepod Body à l'aide du Poly bond.

Date: AUG 20 2007

Heure Début: 9:20

Heure Fin: 9:40

Sceau:



33.0 POCHE À VIDE 1 FAIRE LA POCHE À VIDE



Commentair Setup: 0.00Hrs/ Run: 20.0000Min Total Run: 0.3333Hrs
EFFECTUER LA POCHE A VIDE

Faire la poche à vide en appliquant les composantes dans l'ordre suivant:

- 1- Tissu à délaminer,
- 2- Feutre de drainage
- 3- Sac à vide Stretchlon 200

Retirer le bagging entre 1 heure et 1 heure 1/2 après le mélange de la résine afin d'enlever le surplus de polybond avant que celui-ci ne soit complètement polymérisé

Date: AUG 20 2007

Heure Début: 9:40

Heure Fin: 10:00

Sceau:



Curing Début: 9:20 Curing Fin: 10:30

34.0 AC0058 Polysoft 1.3 kg # 003012 Sikks

Commentair Qty.: 0.100 UNITE(s)/Unit Total: 0.100 UNITE(s)
Polysoft 1.3 kg # 003012 Sikks

N° de Lot: 1-6227-1

Date: Jeudi, 2007-03-29 10:33:13

Utilisateur: Marc Dubé

Feuille de Procédé

Cliant: DART Dart Aerospace Ltd.

Nom Dessin: SPACEPOD BODY

Numéro Job: 41308

Numéro Article: DKC134-0053

Numéro Job:



Séq.: Machine ou Opération: Description:

41.0 AAC0275 Catalyst N° DDM-9

Commentair Qty.: 0.0504 PINTE(s)/Unit Total: 0.0504 PINTE(s)

Catalyst N° DDM-9

N° de Lot:

1-6118-3

42.0 AAC0324 Résine (411B7530) 411-350 promo. 75min.

Commentair Qty.: 1.500 KILOGRAMME(s)/Unit Total: 1.500 KILOGRAMME(s)

Résine (411B7530) 411-350 promo. 75min.

N° de Lot:

1-6271-1

43.0 PRÉPARATION 3 PRÉPARATION DU MATÉRIEL DART



Commentair Setup: 0.00Hrs/ Run: 5.0000Min Total Run: 0.0833Hrs

PRÉPARATION DU MATÉRIEL

Faire la préparation de la résine selon les quantité requises, mix ration 1.5% de Catalyst N° DDM-9 par quantité de résine N° 411-350.

Date: AUG 22 2007

Heure Début: 1:05

Heure Fin: 1:10

Sceau:



44.0 LAMINAGE LAMINAGE PIÈCE DART



Commentair Setup: 0.00Hrs/ Run: 90.0000Min Total Run: 1.5000Hrs

FAIRE LE LAMINAGE DES TISSUS

Laminer deux pli de 9.7 oz 7781 partout dans le moule.

Le laminage doit être fait à l'aide de la résine N° 411-350 / 2% DDM-9.

Date: AUG 22 2007

Heure Début: 1:10

Heure Fin: 1:50

Sceau:



45.0 POCHE À VIDE 1 FAIRE LA POCHE À VIDE



Commentair Setup: 0.00Hrs/ Run: 20.0000Min Total Run: 0.3333Hrs

EFFECTUER LA POCHE A VIDE

Faire la poche à vide en appliquant les composantes dans l'ordre suivant:

- 1- Tissu à délaminer,
- 2- Film perforé P-3,
- 3- Feutre de drainage
- 4- Sac à vide Stretchlon 200

Laisser sécher pendant 4 heures minimum.

Utilisateur: Marc Dubé

Feuille de Procédé

Client: DART Dart Aerospace Ltd.

Nom Dessin: SPACEPOD BODY

Numéro Job: 41308

Numéro Article: DKC134-0053

Numéro Job:



Séq.:

Machine ou Opération:

Description :

Date: AUG 22 2007 Heure Début: 1:30 Heure Fin: 2:70

Sceau:



Curing Début: 1:10 Curing Fin: 8:00

46.0

DÉMOULAGE 1

DÉMOULAGE PIÈCE DART



Commentair Setup: 0.00Hrs/ Run: 30.0000Min Total Run : 0.5000Hrs

DÉMOULAGE DES PIÈCES

Démouler la pièce en se servant de la prise d'air sous le moule en faisant bien attention de ne pas abimer les différentes surfaces de la pièce.

Date: AUG 23 2007 Heure Début: 7:30 Heure Fin: 8:30

Sceau:



47.0

TRIMAGE 3

TRIMAGE COMPOSITES DART



Commentair Setup: 0.00Hrs/ Run: 60.0000Min Total Run : 1.0000Hrs

TRIMAGE DE FINITION

Percer les 8 trous sur la section supérieur de la pièce ainsi que l'ouverture pour la porte à l'aide du gabarit de N° DT5801.

Par l'intérieur, percer les 8 dégagement de ø .745" pour les spacers. (Ne pas percer la peau extérieur de la pièce)

Date: AUG 23 2007 Heure Début: 10:15 Heure Fin: 11:00

Sceau:



48.0

AAC0275

Catalyst N° DDM-9

Commentair Qty.: 0.0048 PINTE(s)/Unit Total : 0.0048 PINTE(s)

Catalyst N° DDM-9

N° de Lot: 1-618-3

49.0

AAC0324

Résine (411B7530) 411-350 promo. 75min.

Commentair Qty.: 0.150 KILOGRAMME(s)/Unit Total : 0.150 KILOGRAMME(s)

Résine (411B7530) 411-350 promo. 75min.

N° de Lot: 1-6271-1

50.0

AAC0673

Fibre de verre Miapoxy 66

Commentair Qty.: 0.0420 GALLON(s)/Unit Total : 0.0420 GALLON(s)

Fibre de verre Miapoxy 66

N° de Lot: 1-5951-1

Utilisateur: Marc Dubé

Feuille de Procédé

Client: DART Dart Aerospace Ltd.

Nom Dessin: SPACEPOD BODY

Numéro Job: 41308

Numéro Article: DKC134-0053

.Numéro Job:



Séq.: Machine ou Opération: Description:

51.0

PRÉPARATION 3

PRÉPARATION DU MATÉRIEL DART



Commentair Setup: 0.00Hrs/ Run: 5.0000Min Total Run : 0.0833Hrs

PRÉPARATION DU MATÉRIEL

Faire la préparation de la résine selon les quantité requises, mix ration 1.5% de Catalyst N° DDM-9 par quantité de résine N° 411-350.

Date: AUG 27 2007Heure Début: 3:15 Heure Fin: 3:20 Sceau:

52.0

AAC0448

Spacer N° D2213

Commentair Qty.: 8 UNITE(s)/Unit Total : 8 UNITE(s)

Spacer N° D2213

N° de Lot: 1-5949-1

53.0

ASSEMBLAGE 3

ASSEMBLAGE GÉNÉRALE DART



Commentair Setup: 0.00Hrs/ Run: 45.0000Min Total Run : 0.7500Hrs

ASSEMBLAGE GÉNÉRALE DES PIÉCES

Faire l'assemblage des inserts (Spacer) N° D2213 dans les trous prévus à cet effet à l'aide de résine N° 411-350 chargé à l'aide de Fibre de verre Miapoxy 66

Laminer une pièce de 9 oz. sur chacune des 2 zones de 4 spacers pour reboucher les trous.

Appliquer une pression sur les pièces de 9 oz. à l'aide d'un bloc de bois et de pinces autobloquantes.

Laisser sécher pendant 4 heures minimum.

Date: AUG 27 2007Heure Début: 3:20 Heure Fin: 4:30 Sceau: Curing Début: 3:20 Curing Fin: 8:00

54.0

AAC0275

Catalyst N° DDM-9

Commentair Qty.: 0.0096 PINTE(s)/Unit Total : 0.0096 PINTE(s)

Catalyst N° DDM-9

N° de Lot: 1-618-3

55.0

AAC0324

Résine (411B7530) 411-350 promo. 75min.

Commentair Qty.: 0.300 KILOGRAMME(s)/Unit Total : 0.300 KILOGRAMME(s)

Résine (411B7530) 411-350 promo. 75min.

N° de Lot: 1-6271-1

Date: Jeudi, 2007-03-29 10:33:13

Utilisateur: Marc Dubé

Feuille de Procédé

Client: DART Dart Aerospace Ltd.

Nom Dessin: SPACEPOD BODY

Numéro Job: 41308

Numéro Article: DKC134-0053

Numéro Job:



Séq.:

Machine ou Opération:

Description :

56.0

PRÉPARATION 3

PRÉPARATION DU MATÉRIEL DART



Commentair Setup: 0.00Hrs/ Run: 5.0000Min Total Run : 0.0833Hrs

PRÉPARATION DU MATÉRIEL

Faire la préparation de la résine selon les quantité requises, mix ration 1.5% de Catalyst N° DDM-9 par quantité de résine N° 411-350.

Date: AUG 27 2007Heure Début: 9:00Heure Fin: 9:05


Sceau:



57.0

LAMINAGE.

LAMINAGE PIÈCE DART



Commentair Setup: 0.00Hrs/ Run: 55.0000Min Total Run : 0.9167Hrs

FAIRE LE LAMINAGE DES TISSUS

Retirer les pinces et les blocs de bois

Faire le laminage d'un pli de 9.7 oz 7781 sur le contour de la pièce selon le dessin.

Laisser sécher pendant 4 heures minimum.

Date: AUG 27 2007Heure Début: 9:05Heure Fin: 10:00


Sceau:

Curing Début: 9:05Curing Fin: 2:00

58.0

FINITION 3

FINITION PIÈCE DART



Commentair Setup: 0.00Hrs/ Run: 0.0000Min Total Run : 0.0000Hrs

FINITION PIÈCE DART

① Sabler les surfaces de la pièces pour aider à l'adhésion du primer et enlever les imperfections.

① Percer les 8 trous des spacers afin de les déboucher.

① Quantité: 1 Date: AUG 28 2007 Sceau:



② Quantité: 1 Date: 29-8-07 Sceau:



59.0

AAC0671

Dupont Primer N° 1104S

Commentair Qty.: 0.5000 GALLON(s)/Unit Total : 0.5000 GALLON(s)

Dupont Primer N° 1104S

1-6149-1

Date: Jeudi, 2007-03-29 10:33:13

Utilisateur: Marc Dubé

Feuille de Procédé

Client: DART Dart Aerospace Ltd.

Nom Dessin: SPACEPOD BODY

Numéro Job: 41308

Numéro Article: DKC134-0053

Numéro Job:



Séq.:

Machine ou Opération:

Description :

60.0

AAC0670

Dupont Activator N° 7975S

Commentair Qty.: 1.0000 PINTÉ(s)/Unit

Total : 1.0000 PINTÉ(s)

Dupont Activator N° 7975S

1-6254-1

61.0

AAC0672

Dupont Reducer N° 12375S

Commentair Qty.: 0.1250 GALLON(s)/Unit

Total : 0.1250 GALLON(s)


Dupont Reducer N° 12375S

1-5769-3

62.0

PRÉPARATION 3

PRÉPARATION DU MATÉRIEL DART



Commentair Setup: 0.00Hrs/ Run: 0.0000Hrs Total Run : 0.0000Hrs

PRÉPARATION DU MATÉRIEL DART

Bien brasser les trois contenants servant à faire le mélange du primer gris N° 1104S et ensuite faire le mélange selon les instruction du fabriquant.

63.0

PEINT/ PRIMER2

PEINTURE / PRIMER DART



Commentair Setup: 0.00Hrs/ Run: 0.0000Min Total Run : 0.0000Hrs

PEINTURE / PRIMER DART

Appliquer le primer Dupont N° 1104S (7975S Activator, 12375S Reducer) Selon I.G. Application de primer.

Laisser sécher 3 heures minimum.

Date: 28-8-07 Heure Début: 2:20 Heure Fin: 3:00 Sceau:



64.0

AC0058

Polysoft 1.3 kg # 003012 Sikkens

Commentair Qty.: 0.100 UNITE(s)/Unit

Total : 0.100 UNITE(s)

Polysoft 1.3 kg # 003012 Sikkens

N° de Lot: 1-6227-1

65.0

AC0059

Durcisseur Polysoft #004009 Sikkens

Commentair Qty.: 0.078 UNITE(s)/Unit

Total : 0.078 UNITE(s)

Durcisseur Polysoft #004009 Sikkens

66.0

FINITION 3

FINITION PIÈCE DART



Commentair Setup: 0.00Hrs/ Run: 90.0000Min Total Run : 1.5000Hrs

FINITION GÉNÉRALE

Faire les réparations de finition s'il y a lieu à l'aide de Sikkens

Faire un léger sablage (grit 220) de toutes les surfaces.

Date: 30-8-07 Heure Début: 8:30 Heure Fin: 11:40 Sceau:



Guide de Procéde

Client: DART Dart Aerospace Ltd.

Numéro Job: 41308

Nom Dessin: SPACEPOD BODY

Numéro Article: DKC134-0053

Numéro Job:



Séq.:

Machine ou Opération:

Description :

67.0

AAC0671

Dupont Primer N° 1104S

Commentair Qty.: 0.2500 GALLON(s)/Unit Total : 0.2500 GALLON(s)
Dupont Primer N° 1104S N° de Lot: 1-6049-1

68.0

AAC0670

Dupont Activator N° 7975S

Commentair Qty.: 0.5000 PINTE(s)/Unit Total : 0.5000 PINTE(s)
Dupont Activator N° 7975S N° de Lot: 1-6065-1

69.0

AAC0672

Dupont Reducer N° 12375S

Commentair Qty.: 0.0625 GALLON(s)/Unit Total : 0.0625 GALLON(s)
Dupont Reducer N° 12375S N° de Lot: 1-6149-2

70.0

PRÉPARATION 3

PRÉPARATION DU MATÉRIEL DART




Commentair Setup: 0.00Hrs/ Run: 15.0000Min Total Run : 0.2500Hrs
PRÉPARATION DU MATÉRIEL

Bien brasser les trois contenants servant à faire le mélange du primer gris N° 1104S et ensuite faire le mélange selon les instruction du fabricant.

71.0

PEINT/ PRIMER2

PEINTURE / PRIMER DART



Commentair Setup: 0.00Hrs/ Run: 90.0000Min Total Run : 1.5000Hrs
APPLICATION DE PRIMER

Appliquer deux couches de primer Dupont N° 1104S (7975S Activator, 12375S Reducer) selon les instruction du manufacturier, en prenant bien soin d'attendre 10 minutes entre les deux couches.

Laisser sécher pendant un minimum de 3 heures.

Date: 30-8-07 Heure Début: 3:50 Heure Fin: 4:15 Sceau: (CLASSEX / COMPOSER 61)

72.0

INSPECTION 3

INSPECTION PIÈCE DART



Commentair Setup: 0.00Hrs/ Run: 15.0000Min Total Run : 0.2500Hrs
INSPECTION GÉNÉRALE

Faire l'inspection générale de la pièces selon le dessin par le département de la qualité.

Date: 31-8-07 Sceau: (CLASSEX / QA-11) Initiales: N.S.

Emballage AT 1

31/8/07



Date: Thursday, 12/21/2006 12:54:32 PM
User: Kim Johnston

Process Sheet

35397

Customer	: CU-DAR001 Dart Helicopters Services	Drawing Name	: SPACEPOD DOOR LH
Job Number	: 30073		
Estimate Number	: 12598		
P.O. Number	: N/A	Part Number	: D31861M
This Issue	: 12/21/2006 S.O. No. : N/A	Drawing Number	: D3186 REV <i>BC</i> <i>UE</i> 07.01.18
Prsht Rev.	: NC	Project Number	: N/A
First Issue	: N/A Type : PURCHASED PARTS	Drawing Revision	: <i>BC</i> <i>UE</i> 07.01.18
Previous Run	: 30018	Material	: N/A
Written By	: <i>[Signature]</i>	Due Date	: 2/15/2007 Qty: 1 Um: Each
Checked & Approved By	: <i>[Signature]</i> 061221		
Comment	: Est Rev:A New Issue 06-12-04 ec		

Additional Product

Job Number:



Seq. #:	Machine Or Operation:	Description :
---------	-----------------------	---------------

1.0	PG	PURCHASING
-----	----	------------



Comment: PURCHASING

Issue P/O: *2771*

Description: D3186-1M Door

Supplier: Delastek

Conformity Certificate and Process sheet required

C20612122 @ (41325)

2.0	D31861P	Spacepod Door
-----	---------	---------------



Comment: Qty.: 1.0000 Each(s)/Unit Total: 1.0000 Each(s)
Spacepod Door

3.0	PACKAGING 1	PACKAGING RESOURCE #1
-----	-------------	-----------------------



Comment: PACKAGING RESOURCE #1

Receive and inspect for transit damage. Ensure a copy of certification of conformity and process sheet from Delastek is attached.

[Signature] 07/10/31

4.0	QC6	DIMENSIONAL CHECK
-----	-----	-------------------



Comment: DIMENSIONAL CHECK

Inspect dimensions as per Dwg D3186 . Visual inspection. Check for void spot and pins.

ml 07/10/31

5.0	PACKAGING 1	PACKAGING RESOURCE #1
-----	-------------	-----------------------



Comment: PACKAGING RESOURCE #1

Identify and Stock
Location: *GA*

ml 07/10/31

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: _____ PAR #: _____ Fault Category: _____ NCR: Yes No DQA: _____ Date: _____

QA: N/C Closed: _____ Date: _____

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries

Date: Thursday, 12/21/2006 12:54:32 PM
User: Kim Johnston

Process Sheet

Customer: CU-DAR001 Dart Helicopters Services

Drawing Name: SPACEPOD DOOR LH

Job Number: 30073

Part Number: D31861M

Job Number:



Seq. #:

Machine Or Operation:

Description :

6.0

QC21

FINAL INSPECTION/W/O RELEASE



Comment: FINAL INSPECTION/W/O RELEASE

HD 87.12.06

Job Completion



in 87.12.06

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: _____ PAR #: _____ Fault Category: _____ NCR: Yes No DQA: _____ Date: _____

QA: N/C Closed: _____ Date: _____

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			


NOTE: Date & initial all entries

DART

DESIGN DS	DRAWN BY LE	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
CHECKED PH	APPROVED H	DRAWING NO. D3186	REV. C SHEET 1 OF 5
DATE 06.12.13	TITLE SPACEPOD DOOR		SCALE NTS
A	03.03.27	NEW ISSUE	
B	06.09.25	DIMS UPDATED TO MATCH PRODUCT FOAM PATTERN UPDATED D3186-1M/-2M/-3/-4 ADDED	
C	06.12.13	REMOVED D0600-XXX LABELS	

MAIN LAYUP

9 OZ SATIN (9 SQ FEET)
9 OZ SATIN (9 SQ FEET)
FOAM
9 OZ SATIN (9 SQ FEET)
12 OZ UNIDIRECTIONAL
9 OZ SATIN (9 SQ FEET)
RESIN (35-45% BY WEIGHT)
PEEL PLY

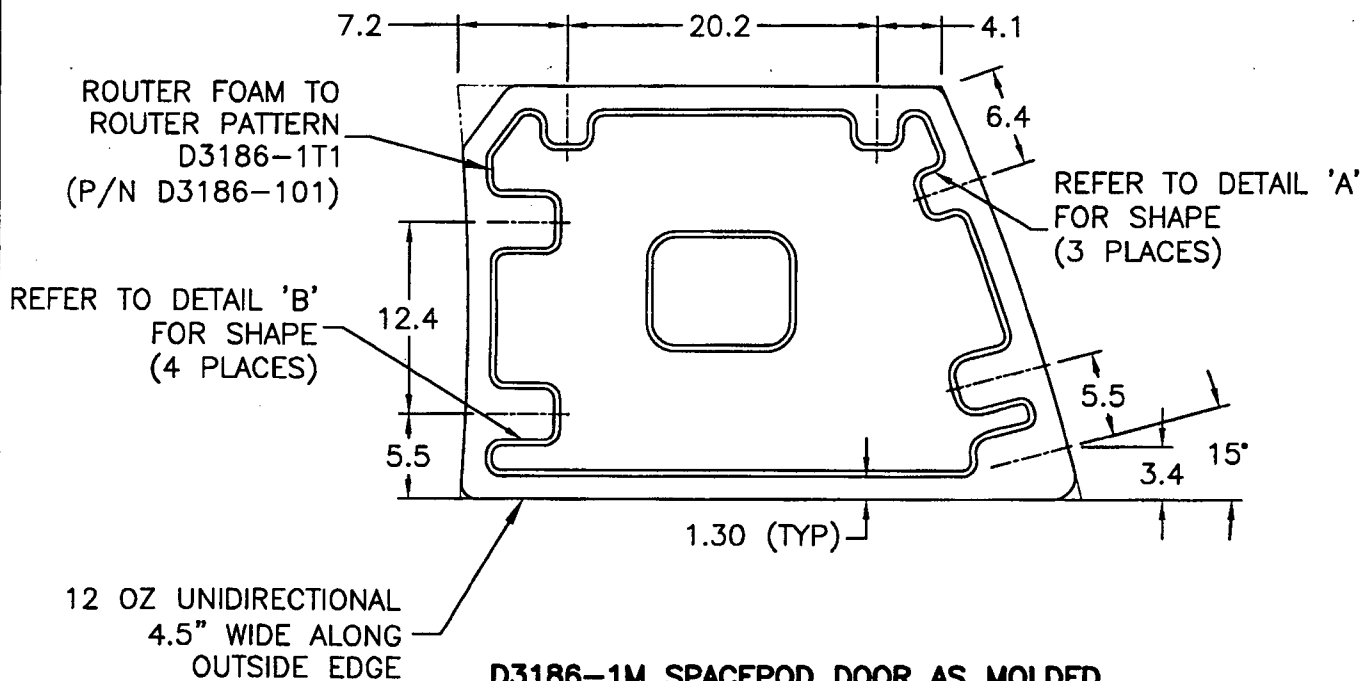**D3186-1M SPACEPOD DOOR AS MOLDED****RELEASED**
06.12.22**NOTES:**

- 1) USE MOLD DT8005 FOR DOOR LAYUP
- 2) RESIN: EPOCAST 50-A/9816 OR DERAKANE 470-36/411/510A40
- 3) FOAM: 3/8", A500 CORE-CELL OR DIVINYCELL OR AIREX OR KLEGECELL
- 4) FIBRE: 9.7 OZ 7781 WEAVE "S" GLASS ("9 OZ SATIN")
12 OZ UNIDIRECTIONAL FIBERGLASS ("12 OZ UNIDIRECTIONAL")
- 5) LAMINATE PER DART QSI 006 4.0
- 6) LAMINATION SCHEDULE PER THIS DRAWING
- 7) FINISH INSIDE/OUTSIDE WITH DUPONT HIGHBUILD GREY PRIMER 1144-S
- 8) ALL DIMENSIONS ARE IN INCHES
- 9) TOLERANCES ARE PER DART QSI 018 UNLESS OTHERWISE NOTED

UNCONTROLLED COPY
RETURN TO
ENGINEERING
SUBJECT TO AMENDMENT
WITHOUT NOTICE
WORK ORDER
NO. 30073

Copyright © 2003 by DART AEROSPACE LTD


THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.

DART

DESIGN DS	DRAWN BY LE	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
CHECKED PH	APPROVED #	DRAWING NO. D3186	REV. C SHEET 2 OF 5
DATE 06.12.13		TITLE SPACEPOD DOOR	SCALE NTS

MAIN LAYUP

9 OZ SATIN (9 SQ FEET)
9 OZ SATIN (9 SQ FEET)
FOAM
9 OZ SATIN (9 SQ FEET)
12 OZ UNIDIRECTIONAL
9 OZ SATIN (9 SQ FEET)
RESIN (35-45% BY WEIGHT)
PEEL PLY

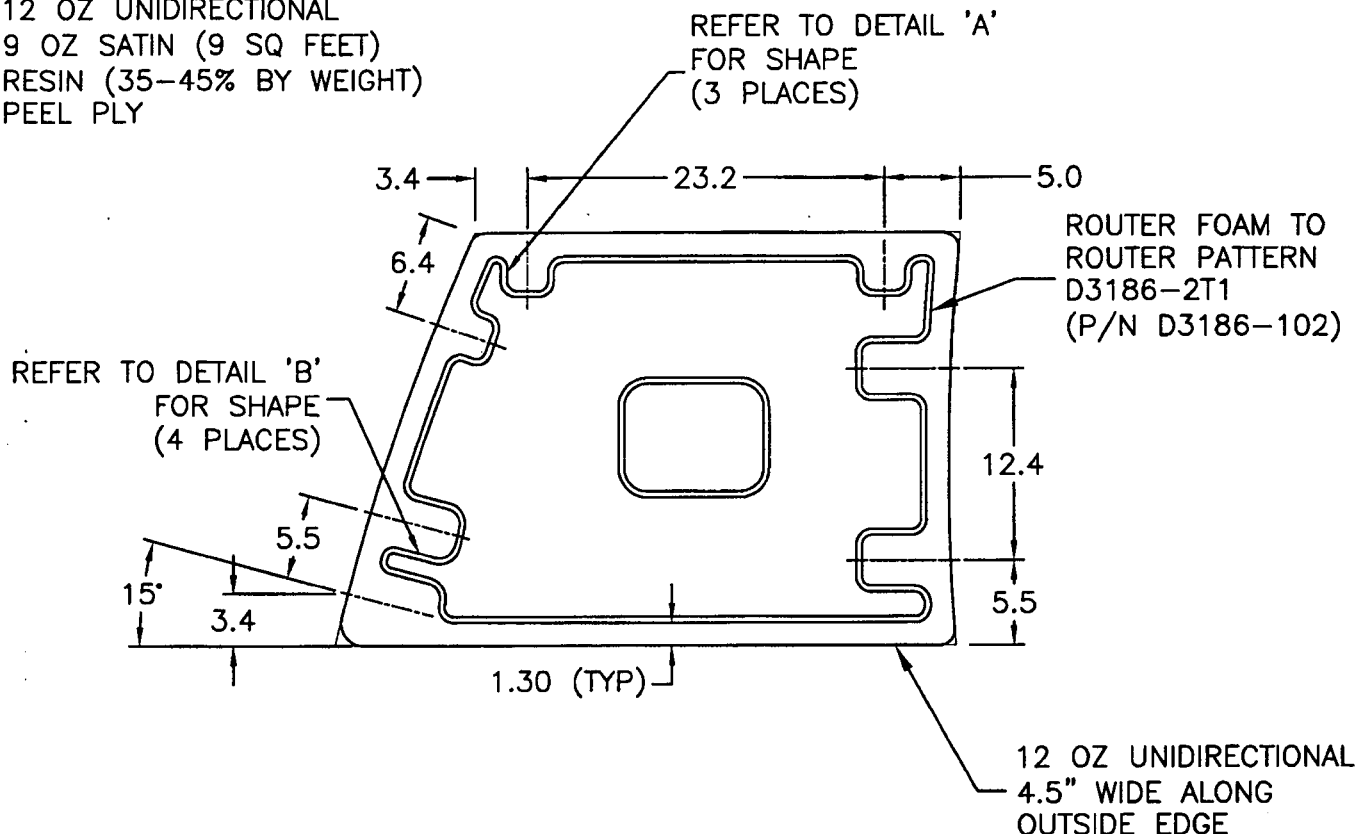RELEASED
06.12.13**D3186-2M SPACEPOD DOOR AS MOLDED****NOTES:**

- 1) USE MOLD DT8006 FOR DOOR LAYUP
- 2) RESIN: EPOCAST 50-A/9816 OR DERAKANE 470-36/411/510A40
- 3) FOAM: 3/8", A500 CORE-CELL OR DIVINYCELL OR AIREX OR KLEGECELL
- 4) FIBRE: 9.7 OZ 7781 WEAVE "S" GLASS ("9 OZ SATIN")
12 OZ UNIDIRECTIONAL FIBERGLASS ("12 OZ UNIDIRECTIONAL")
- 5) LAMINATE PER DART QSI 006 4.0
- 6) LAMINATION SCHEDULE PER THIS DRAWING---
- 7) FINISH INSIDE/OUTSIDE WITH DUPONT HIGHBUILD GREY PRIMER 1144-S
- 8) ALL DIMENSIONS ARE IN INCHES
- 9) TOLERANCES ARE PER DART QSI 018 UNLESS OTHERWISE NOTED

STOP COPY
RETURN TO
ENGINEERING
UNCONTROLLED COPY
SUBJECT TO AMENDMENT
WITHOUT NOTICE
WORK ORDER
NO. 30073


Copyright © 2003 by DART AEROSPACE LTD

THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.

DART


DESIGN -DS	DRAWN BY <i>LE</i>	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
CHECKED <i>PH</i>	APPROVED <i>[Signature]</i>	DRAWING NO. D3186	REV. C SHEET 3 OF 5
DATE 06.12.13	TITLE SPACEPOD DOOR		SCALE NTS

REFER TO DETAIL 'C'
FOR HOLE DETAILS
(2 SETS)

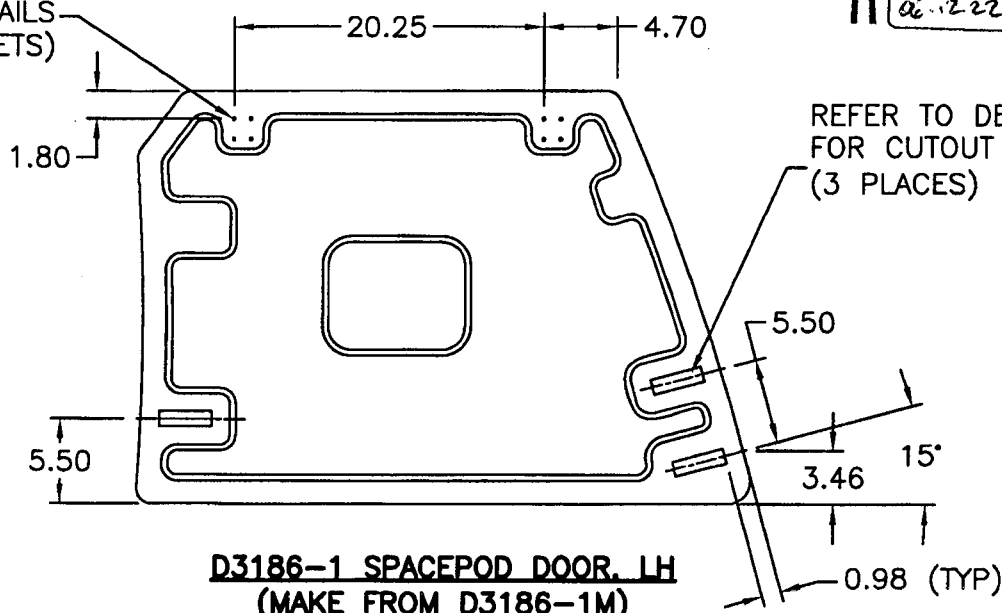**RELEASED**
ai-222

REFER TO DETAIL 'C'
FOR HOLE DETAILS

REFER TO DETAIL 'D'
FOR CUTOUT DETAILS
(2 PLACES)

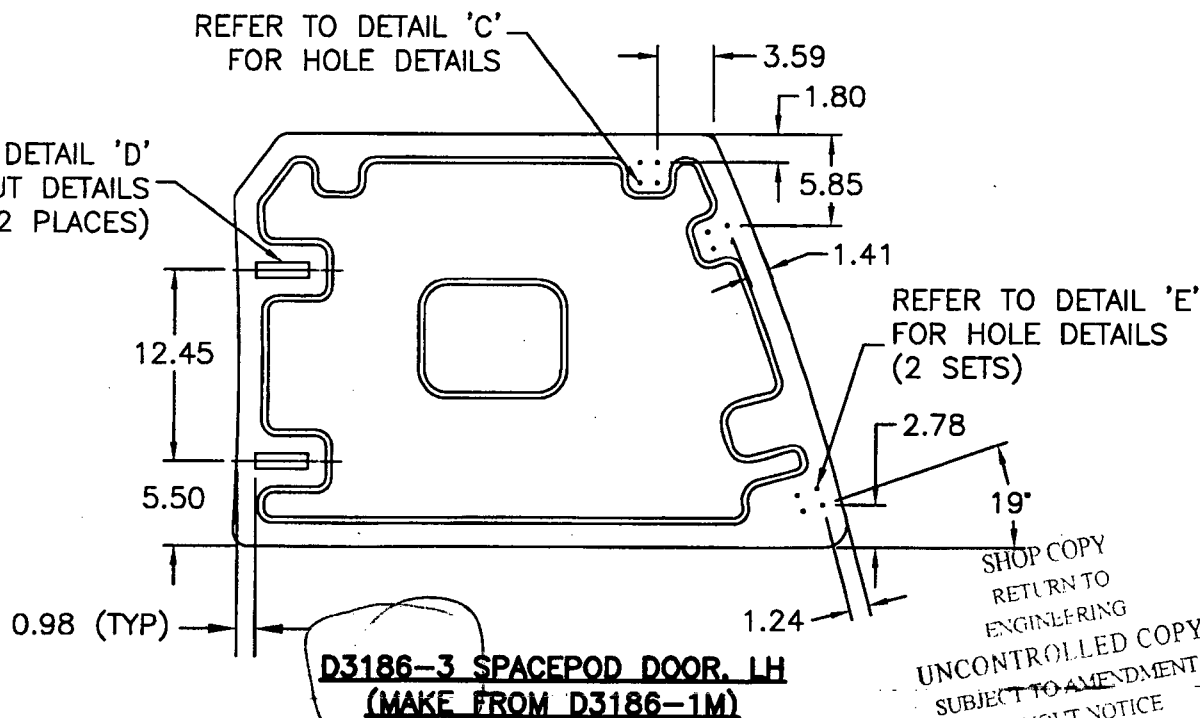**NOTES:**

- 1) ALL DIMENSIONS ARE IN INCHES
- 2) TOLERANCES ARE PER DART QSI 018 UNLESS OTHERWISE NOTED

SHOP COPY
RETURN TO
ENGINEERING
UNCONTROLLED COPY
SUBJECT TO AMENDMENT
WITHOUT NOTICE
WORK ORDER
NO. **30073**


Copyright © 2003 by DART AEROSPACE LTD

THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.




DESIGN DS	DRAWN BY LE	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
CHECKED PH	APPROVED [Signature]	DRAWING NO. D3186	REV. C SHEET 4 OF 5
DATE 06.12.13	TITLE SPACEPOD DOOR		SCALE NTS

RELEASED
06.12.22

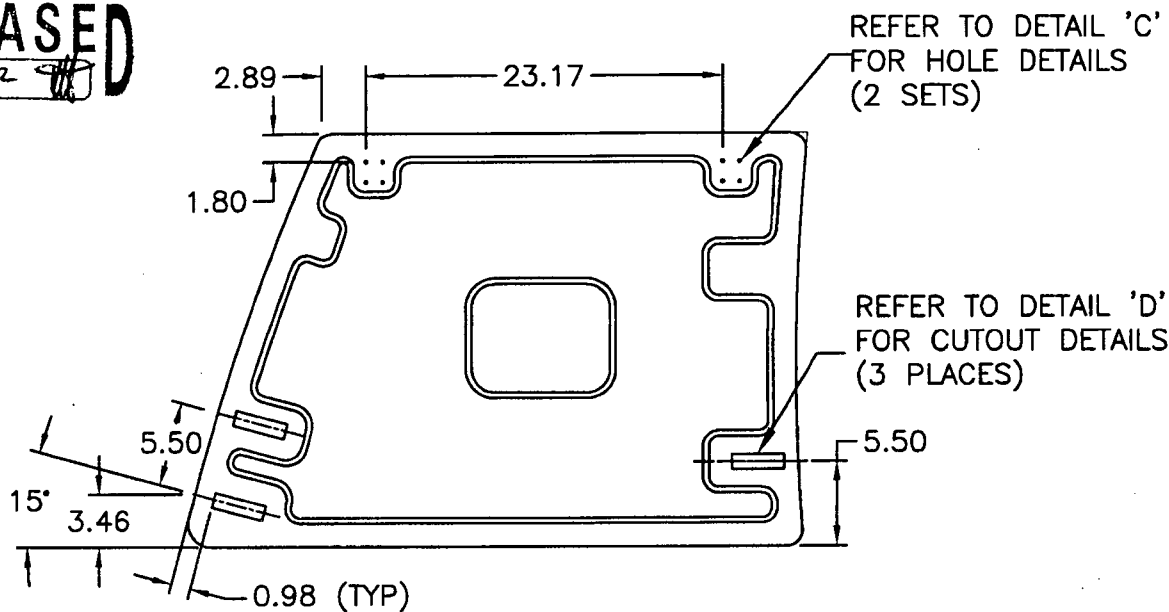

D3186-2 SPACEPOD DOOR, RH
(MAKE FROM D3186-2M)

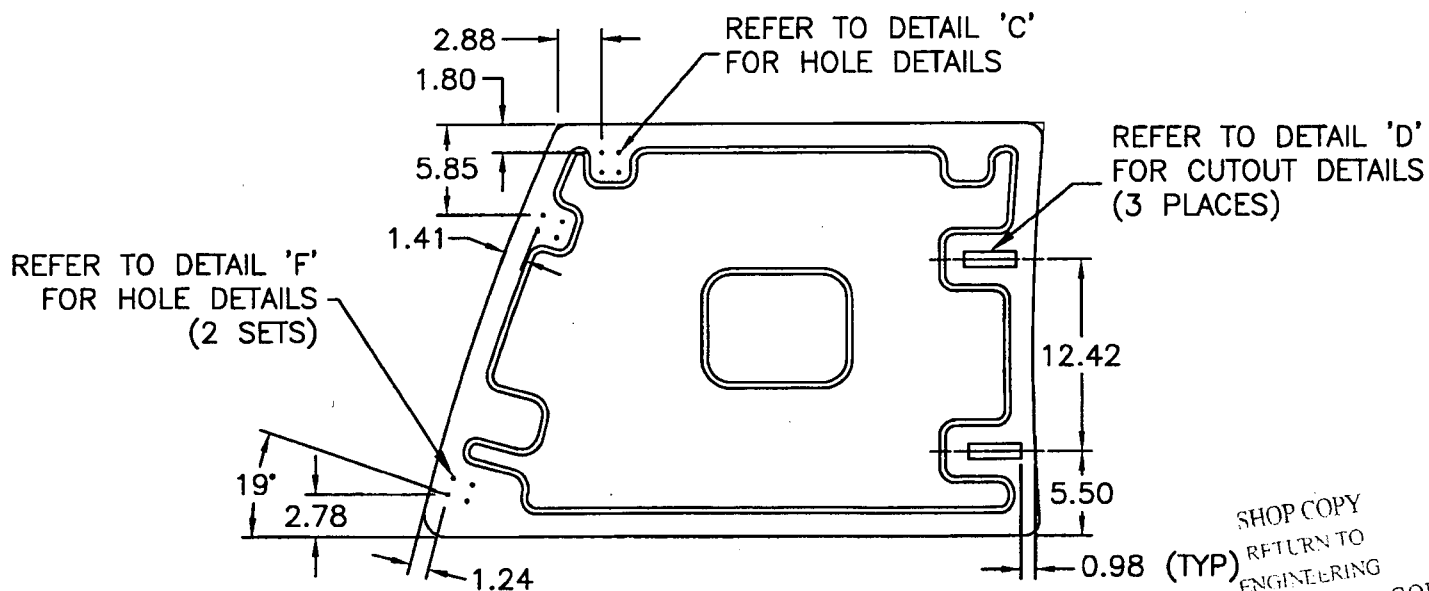

D3186-4 SPACEPOD DOOR, RH
(MAKE FROM D3186-2M)

NOTES:

- 1) ALL DIMENSIONS ARE IN INCHES
- 2) TOLERANCES ARE PER DART QSI 018 UNLESS OTHERWISE NOTED


SHOP COPY
RETURN TO
ENGINEERING
UNCONTROLLED COPY
SUBJECT TO AMENDMENT
WITHOUT NOTICE
WORK ORDER
NO. 30073

Copyright © 2003 by DART AEROSPACE LTD


THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.




DESIGN —DS—	DRAWN BY LE	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
CHECKED PH	APPROVED [Signature]	DRAWING NO. D3186	REV. C SHEET 5 OF 5
DATE 06.12.13	TITLE SPACEPOD DOOR		SCALE NTS

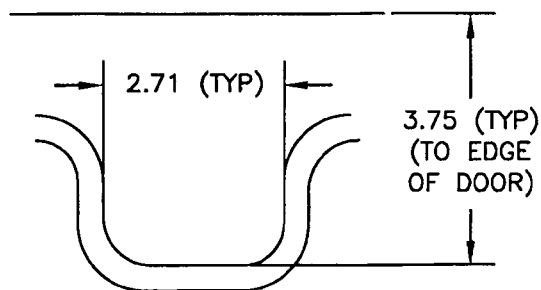


DETAIL A

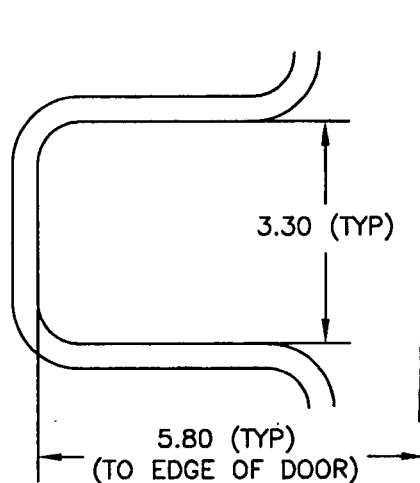

DETAIL B

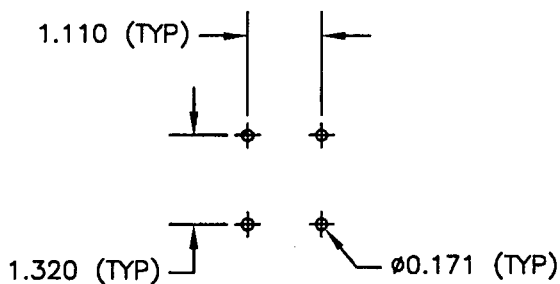


DETAIL C

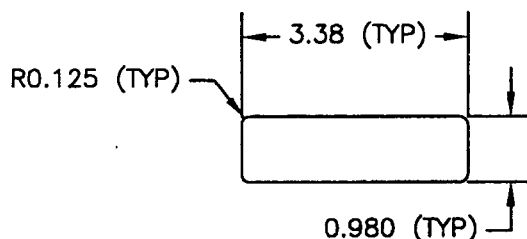


NOTE: ENSURE THAT CUTOUT IS PERPENDICULAR TO EDGE OF DOOR

DETAIL D

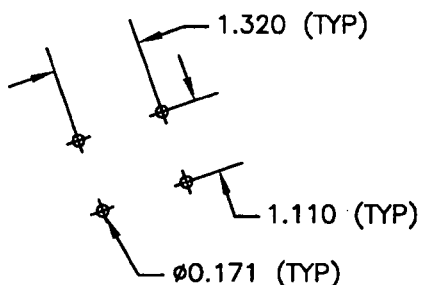

DETAIL E

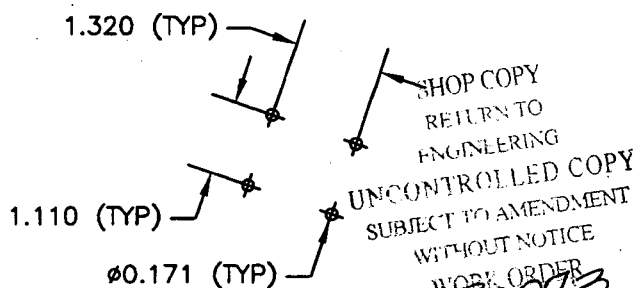

DETAIL F

NOTES:

- 1) ALL DIMENSIONS ARE IN INCHES
- 2) TOLERANCES ARE PER DART QSI 018 UNLESS OTHERWISE NOTED

Copyright © 2003 by DART AEROSPACE LTD

THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.

RELEASED
06.12.22



DELASTEK COMPOSITES INC.
2699, 5ième Avenue
Local 14, PORTE -A-
Grand-Mère, Québec G9T 5K7
Can **Fax (819) 533-3494 **

PACKING SLIP CERTIFICATE OF COMPLIANCE

Invoice #	12145
Customer #	DART

Telephone: (819) 533-5788
Warehouse: MAIN

Bill to:

Dart Aerospace Ltd.
1270, Aberdeen Street
Hawkesbury, Ontario K6A 1K7
Canada

Ship to:

Dart Aerospace Ltd.
1270, Aberdeen Street
Hawkesbury, Ontario K6A 1K7
Canada

Telephone: 613-632-3336
Contact: Linda Lacelle

Ship via		F.O.B.		Terms		Salesperson	
EPIC EXPRESS COLLECT		Origin		Net30 days		Claude Lessard, ext. 233	
Ship date	Order Date	Our PO #	Order by		Your PO #	GST/PST #	
05/09/2007	22/12/2006	5093	C. Lavoie		PO00002771		
Order Qty	B.O. Qty	Current Ship.	Item #	Item Description			
1	0	1	DKC134-0054	D3186-2M Spacepod Door RH B30083 Dwg. Rév.: D Job: 42018 U de M : Each			
1	0	1	DKC134-0055	D3188-2M Spacepod Body RH B30088 Dwg. Rév.: D Job: 41316 U de M : Each			
1	0	1	DKC134-0052	D3186-1M Spacepod Door LH B30073 Dwg. Rév.: D Job: 41325 U de M : Each			
1	0	1	DKC134-0053	D3188-1M Spacepod Body LH B30078 Dwg. Rév.: D Job: 41308 U de M : Each			

It is hereby certified that all materials, process and finished items were controlled and tested in accordance with the requirements of the purchase order and applicable specifications. All such records are on file at our plant and available for review upon request.

☒ Cust. ☐ Adm. ☐ Quality ☐ Ship.

Accepted by:

Michael St/and

Quality department

AQ-357



Date: Jeudi, 2007-04-05 10:00
 Utilisateur: Marc Dubois

Feuille de Procédé

Client	Dart Aerospace Ltd	Nom Dessin	: SPACEPOD DOOR
Numéro Job		Numéro Article	: DKC134-0052
Numéro Soumission		Numéro Dessin	: D3186
Numéro B.A.		Projet Numéro	: DKC134
Cette fois	No. B.V. :	Révision dessin	: C
Prsht Rev.		Matériel	: Fibre 7781 et Résine 411-350
Prem. fois	Type :	Date Dûe	: 2007-04-05 Qté: 1 Udm: UNITE


 Écrit par :
 Vérifié & Approuvé par :
 Commentaires :

pièce Dart Aerospace : D31861M

 Process Sheet Rev 01 Modification générale selon informations de
 Ingénierie

Produit additionnel

Numéro Job:



# Séq.:	Opération:	Description :
---------	------------	---------------

1.0	3	Frekote 44NC
-----	---	--------------

Commentaire	0.020 GALLON(s) Unit	Total : 0.020 GALLON(s)
	Frekote 44NC	

2.0	PRÉPARATION 3	PRÉPARATION DU MATÉRIEL DART
-----	---------------	------------------------------



Commentaire	0.0833 Hrs/ Run: 5.000 Min	Total Run : 0.0833Hrs
	PRÉPARATION DU MOULE	

 Préparation du moule N° DT 8005 à l'aide de Frekote 44NC et laisser sécher pendant 3 heures selon
 DT-006

Date: 06 2007

Heure Début: 12:00

Heure Fin: 2:00

Sceau:



3.0	AC0409	Tissu à délaminer Release ply B
-----	--------	---------------------------------

Commentaire Qty.:	3.28 VERGE(s)/Unit	Total : 3.28 VERGE(s)
	Tissu à délaminer Release ply B	

4.0	AC0407	Wrightlon 5200 Bleu P3
-----	--------	------------------------

Commentaire Qty.:	3.59 VERGE(s)/Unit	Total : 3.59 VERGE(s)
	Wrightlon 5200 Bleu P3	








5.0	AC0408	Feutre de drainage N° Airweave N 10
-----	--------	-------------------------------------

Commentaire Qty.:	3.00 VERGE(s)/Unit	Total : 3.00 VERGE(s)
	Feutre de drainage N° Airweave N 10	

6.0	AC0752	Stretchlon 200 poche à vide Vert
-----	--------	----------------------------------










Commentaire Qty.:	3.00 VERGE(s)/Unit	Total : 3.00 VERGE(s)
	Stretchlon 200 poche à vide Vert	

Feuille de Procédé

Client: Dart Aerospace Ltd.	Nom Dessin: SPACEPOD DOOR	
Numéro Job: 43	Numéro Article: DKC134-0052	
Numéro Job:		
# Séq.:	Line ou Opération:	Description :
7.0	9.7 oz Weave #FG-778150-125Y Volan Finish	
Commentaire:	4.500 VERGE(s)/Unit Total : 4.500 VERGE(s)	
	9.7 oz Weave #FG-778150-125Y Volan Finish	# LOT: 2-6093-1
8.0	Ruban à gommer jaune # T/AT-200Y	
Commentaire:	2.2500 RL(s)/Unit Total : 2.2500 RL(s)	
	Ruban à gommer jaune # T/AT-200Y	
9.0	Fiberglass 12 oz Unidirectional	
Commentaire:	1.00 VERGE CAR(s)/Unit Total : 1.00 VERGE CAR(s)	
	Fiberglass 12 oz Unidirectional	N° de Lot: 1-5964-1
10.0	PRÉPARATION 3	PRÉPARATION DU MATÉRIEL DART
		
Commentaire:	Op: 0.00Hrs/ Run: 30.000Min Total Run : 0.5000Hrs	
	TAILLAGE DU MATÉRIEL	
	Préparer le matériel, selon les différents patrons de découpe :	
	Enrouler le Ruban jaune tout le tour du stretchlon 200 en laissant le papier sur le coté non en contact avec le sac à vide.	
	Préparer le processus de taillage, tailler les plis de 9.7 oz tous en même temps en les superposants les uns sur les autres.	
	Heure Début: 1:30	Heure Fin: 10:00 Sceau: 
11.0	Catalyst N° DDM-9	
Commentaire:	0.0080 PINTE(s)/Unit Total : 0.0080 PINTE(s)	
	DDM-9	N° de Lot: 1-5921-3
12.0	Résine (411B7530) 411-350 promo. 75min.	
Commentaire:	0.500 KILOGRAMME(s)/Unit Total : 0.500 KILOGRAMME(s)	
	Résine (411B7530) 411-350 promo. 75min.	N° de Lot: 1-6228-1
13.0	PRÉPARATION 3	PRÉPARATION DU MATÉRIEL DART
		
Commentaire:	Op: 0.00Hrs/ Run: 5.000Min Total Run : 0.0833Hrs	
	PRÉPARATION DU MATÉRIEL	
	Préparer la préparation de la résine selon les quantité requises, mix ration 1.5% de Catalyst N° DDM-9 par quantité de résine N° 411-350.	
	Heure Début: 1:30	Heure Fin: 1:35 Sceau: 











Utilisateur: Marc Dubé

Feuille de Procédé

Client: DART	Dart Aerospace Ltd.	Nom Dessin: SPACEPOD DOOR
Numéro Job: 4133		Numéro Article: DKC134-0052
Numéro Job:		
# Séq.:	Machine ou Opération:	Description :
14.0	LAMINAGE. 	LAMINAGE PIÈCE DART 
<p>Commentaire: Setup: 0.00Hrs/ Run: 15.000Min Total Run : 0.2500Hrs FAIRE LE LAMINAGE DES TISSUS</p> <p>Prendre un rouleau 2" de large et appliquer une couche de résine N° 411-350 sur le moule N° DT 8005 et ensuite passer un pli de tissu 9.75".</p> <p>Commencer l'opération pour le deuxième pli.</p> <p>09 2007 Heure Début: 1:35 Heure Fin: 1:50 Sceau:  </p>		
15.0	POCHE À VIDE 1 	FAIRE LA POCHE À VIDE 
<p>Commentaire: Setup: 0.00Hrs/ Run: 10.000Min Total Run : 0.1667Hrs FAIRE LA POCHE À VIDE</p> <p>Faire la poche à vide en appliquant les composantes dans l'ordre suivant:</p> <p>Tissu à délaminer, Film perforé P-3, Feuille de drainage Feuille à vide Stretchlon 20</p> <p>Permettre sécher pendant 4 heures minimum.</p> <p>09 2007 Heure Début: 1:50 Heure Fin: 2:00 Sceau:  </p> <p>Heure Début: 1:35 Curing Fin: 8:00</p>		
16.0	AAC 75	Catalyst N° DDM-9
<p>Commentaire: Qty: 0.0120 PINTE(s)/Unit Total: 0.0120 PINTE(s) Catalyst N° DDM-9</p> <p>Lot: 1-5921-3</p>		
17.0	AAC 24	Résine (411B7530) 411-350 promo. 75min.
<p>Commentaire: Qty: 0.300 KILOGRAMME(s)/Unit Total: 0.300 KILOGRAMME(s) Résine (411B7530) 411-350 promo. 75min.</p> <p>Lot: 1-6228-1</p>		











Date: Jeudi, 2007-03-29 10:34:04
Utilisateur: Marc Dubé

Feuille de Procédé

Client: DART Dart Aerospace Ltd. Numéro Job: 41325		Nom Dessin: SPACEPOD DOOR Numéro Article: DKC134-0052	
Numéro Job:			
# Séq.:	Machine ou Opération:	Description :	
18.0	PRÉPARATION 3 	PRÉPARATION DU MATÉRIEL DART 	
<p>Commentaire Setup: 0.00Hrs/ Run: 5.0000Min Total Run : 0.0833Hrs PRÉPARATION DU MATÉRIEL</p> <p>Faire la préparation de la résine selon les quantité requises, mix ration 1.5% de Catalyst N° DDM-9 par quantité de résine N° 411-50 Imbiber toutes les surfaces du foam core.</p> <p>Laisse sécher pendant 2 heures.</p> <p>Date: 10 2007 Heure Début: 8:45 Heure Fin: 9:00 Sceau: </p>			
19.0	DKC134-0056	Foam Core N° D3186-101 (Porte D3186-1)	
<p>Commentaire Qty: 1 UNITE(s)/Unit Total : 1 UNITE(s) Foam Core N° D3186-101 (Porte D3186-1) #JOB: 42016</p>			
20.0	AAC0452	Polybond B46F	
<p>Commentaire Qty: 0.082 KIT(s)/Unit Total : 0.082 KIT(s) Polybond B46F N° de Lot: 1-6177-1</p>			
21.0	ASSEMBLAGE 3 	ASSEMBLAGE GÉNÉRALE DART 	
<p>Commentaire Setup: 0.00Hrs/ Run: 15.0000Min Total Run : 0.2500Hrs ASSEMBLAGE GÉNÉRAL DES PIÉCES</p> <p>Retirez le bagging.</p> <p>Pour aider au positionnement de 12 oz., positionner le gabarit de trimage dans le moule et tracer son contour sur le 9 oz. Retirez le gabarit de trimage.</p> <p>Positionner le foam core à l'aide du gabarit prévu à cet effet et tracer le contour sur le 9 oz. (Vous devriez maintenant avoir 2 contours de tracé sur le 9 oz.)</p> <p>Appliquer une couche de Polybond B46F à l'endos du Foam Core N° DKC134-0056 et positionner le foam Core sur le moule selon le dessin, et selon les ligne de positionnement prévues à cet effet.</p> <p>Date: 11 2007 Heure Début: 10:15 Heure Fin: 10:40 Sceau:  </p>			
22.0	POCHE À VIDE 1 	FAIRE LA POCHE À VIDE 	
<p>Commentaire Setup: 0.00Hrs/ Run: 10.0000Min Total Run : 0.1667Hrs FAIRE LA POCHE À VIDE</p> <p>Faire la poche à vide en appliquant les composantes dans l'ordre suivant:</p> <p>1- Tissu à délaminer 2- Tente de drainage</p>			

Utilisateur: Marc Dubé












Feuille de Procédé

Client: DART Numéro Job: 41325	Dart Aerospace Ltd.	Nom Dessin: SPACEPOD DOOR Numéro Article: DKC134-0052
Numéro Job:		
# Séq.:	Machine ou Opération:	Description :
	<p>3- Sac à vide Stretchlon 200</p> <p>Laisser sécher pendant 2 heures minimum.</p> <p>Retirez le bagging avant la fin de la polymérisation (entre 1 heure et 1heure 1/2) afin d'enlever le surplus de polybond.</p> <p>Date: 11 2007 Heure Début: 10:40 Heure Fin: 11:00 Sceau:  </p> <p>Curing Début: 10:30 Curing Fin: 11:45</p>	
23.0	AAC0275	Catalyst N° DDM-9
Commentaire	<p>Qty.: 0.0400 PINTE(s)/Unit Total: 0.0400 PINTE(s)</p> <p>Catalyst N° DDM-9</p> <p>N° de Lot: 1-618-B</p>	
24.0	AAC0324	Résine (411B7530) 411-350 promo. 75min.
Commentaire	<p>Qty.: 1.000 KILOGRAMME(s)/Unit Total: 1.000 KILOGRAMME(s)</p> <p>Résine (411B7530) 411-350 promo. 75min.</p> <p>N° de Lot: 1-6228-1</p>	
25.0	PRÉPARATION 3	PRÉPARATION DU MATÉRIEL DART
		
Commentaire	<p>Setup: 0.00Hrs/ Run: 5.000 Min Total Run : 0.0833Hrs</p> <p>PRÉPARATION DU MATÉRIEL</p> <p>Faire la préparation de la résine selon les quantité requises, mix ration 1.5% de Catalyst N° DDM-9 par quantité de résine N° 411-350.</p> <p>Date: AUG 01 2007 Heure Début: 9:00 Heure Fin: 9:05 Sceau: </p>	
26.0	LAMINAGE.	LAMINAGE PIÈCE DART
		
Commentaire	<p>Setup: 0.00Hrs/ Run: 30.000 Min Total Run : 0.5000Hrs</p> <p>FAIRE LE LAMINAGE DES TISSUS :</p> <p>Faire le liminage d'un pli de 9.7 oz.</p> <p>Faire le laminage du pli de tissu de 12 oz tout le tour de la porte .</p> <p>Faire le laminage du dernier pli de 9.7 oz.</p> <p>Date: AUG 01 2007 Heure Début: 9:05 Heure Fin: 9:35 Sceau:  </p>	

Date: Jeudi, 2007-03-29 10:34:05

Utilisateur: Marc Dubé










Feuille de Procédé

Client: DART Dart Aerospace Ltd.		Nom Dessin: SPACEPOD DOOR	
Numéro Job: 41325		Numéro Article: DKC134-0052	
Numéro Job:			
# Séq.:	Machine ou Opération:	Description :	
27.0	POCHE À VIDE 1	FAIRE LA POCHE À VIDE	
			
Commentaire Setup: 0.00Hrs/ Run: 10.0000Min Total Run : 0.1667Hrs EFFECTUER LA POCHE A VIDE Faire la poche à vide en appliquant les composantes dans l'ordre suivant: 1- Tissu à délaminer, 2- Film perforé P-3, 3- Feutre de drainage 4- Sac à vide Stretchlon 200 Laisser sécher pendant 4 heures minimum. Date: <u>AUG 01 2007</u> Heure Début: <u>9:35</u> Heure Fin: <u>10:00</u> Sceau:   Curing Début: <u>9:05</u> Curing Fin: <u>1:30</u>			
28.0	DÉMOULAGE 1	DÉMOULAGE PIÈCE DART	
			
Commentaire Setup: 0.00Hrs/ Run: 5.0000Min Total Run : 0.0833Hrs DÉMOULAGE DES PIÈCES Démouler la pièce en faisant bien attention de ne pas abimer les coins et le " edges ". Sabler la surface de la pièce qui était en contact avec le moule pour éliminer le fini lisse de celui-ci Date: <u>AUG 01 2007</u> Heure Début: <u>2:45</u> Heure Fin: <u>2:50</u> Sceau: 			
29.0	TRIMAGE 3	TRIMAGE COMPOSITES DART	
			
Commentaire Setup: 0.00Hrs/ Run: 30.0000Min Total Run : 0.5000Hrs TRIMAGE DE FINITION Trimer le contour de la pièce à l'aide du gabarit de trimage prévu à cet effet. Date: <u>02-07</u> Heure Début: <u>2:00</u> Heure Fin: <u>2:15</u> Sceau: 			
30.0	AAC0671	Dupont Primer N° 1104S	
Commentaire Qty.: 0.1390 GALLON(s)/Unit Total : 0.1390 GALLON(s) Dupont Primer N° 1104S			

Date: Jeudi, 2007-03-29 10:34:05

Utilisateur: Marc Dubé

Feuille de Procédé

Client: DART Dart Aerospace Ltd.		Nom Dessin: SPACEPOD DOOR	
Numéro Job: 41325		Numéro Article: DKC134-0052	
Numéro Job:			
# Séq.:	Machine ou Opération:	Description :	
31.0	AAC0670	Dupont Activator N° 7975S	
Commentaire Qty.: 0.2800 PINTE(s)/Unit Total : 0.2800 PINTE(s) Dupont Activator N° 7975S			
32.0	AAC0672	Dupont Reducer N° 12375S	
Commentaire Qty.: 0.0350 GALLON(s)/Unit Total : 0.0350 GALLON(s) Dupont Reducer N° 12375S			
33.0	PRÉPARATION 3	PRÉPARATION DU MATÉRIEL DART	
			
Commentaire Setup: 0.00Hrs/ Run: 0.0000Hrs Total Run : 0.0000Hrs PRÉPARATION DU MATÉRIEL DART			
AUG 09 2007 			
Bien brasser les trois contenants servant à faire le mélange du primer gris N° 1104S et ensuite faire le mélange selon les instruction du fabricant.			
34.0	PEINT/ PRIMER2	PEINTURE / PRIMER DART	
			
Commentaire Setup: 0.00Hrs/ Run: 0.0000Min Total Run : 0.0000Hrs PEINTURE / PRIMER DART			
Appliquer la première couche de primer Dupont N° 1104S (7975S Activator, 12375S Reducer) selon I.G. # Application du primer.			
Laisser sécher pendant 3 heures.			
AUG 09 2007 Date: 9:30 Heure Début: 10:00 Heure Fin: Sceau: 			
35.0	FINITION 3	FINITION PIÈCE DART	
			
Commentaire Setup: 0.00Hrs/ Run: 0.0000Min Total Run : 0.0000Hrs FINITION PIÈCE DART			
Sabler la pièce à l'aide de papier sablé grit 220 afin de corriger les imperfections et enlever le lustre du primer.			
36.0	AC0058	Polysoft 1.3 kg # 003012 Sikkens	
Commentaire Qty.: 0.050 UNITE(s)/Unit Total : 0.050 UNITE(s) Polysoft 1:3 kg # 003012 Sikkens			

Client: DART Dart Aerospace Ltd.
Numéro Job: 41325Nom Dessin: SPACEPOD DOOR
Numéro Article: DKC134-0052

Numéro Job:



Séq.: Machine ou Opération: Description :

37.0 AAC0646 MASTIC POLYSOFT SIKKENS 3AR591

Commentair Qty.: 0.050 KIT(s)/Unit Total: 0.050 KIT(s)
MASTIC POLYSTOP SIKKENS 3AR591

38.0 AC0059 Durcisseur Polysoft #004009 Sikkens

Commentair Qty.: 0.039 UNITE(s)/Unit Total: 0.039 UNITE(s)
Durcisseur Polysoft #004009 Sikkens N° de Lot: 1-6227-1

39.0 FINITION 3 FINITION PIÈCE DART

Commentair Setup: 0.00Hrs/ Run: 10.0000Min Total Run: 0.1667Hrs
FINITION GÉNÉRALE

Faire les réparations de finition s'il y a lieu, à l'aide de sikkens.

Date: 21-8-07 Heure Début: 9:30 Heure Fin: 11:30 Sceau:



40.0 AAC0671 Dupont Primer N° 1104S

Commentair Qty.: 0.1390 GALLON(s)/Unit Total: 0.1390 GALLON(s)
Dupont Primer N° 1104S N° de Lot: 1-6149-1

41.0 AAC0670 Dupont Activator N° 7975S

Commentair Qty.: 0.2800 PINTÉ(s)/Unit Total: 0.2800 PINTÉ(s)
Dupont Activator N° 7975S N° de Lot: 1-6254-1

42.0 AAC0672 Dupont Reducer N° 12375S

Commentair Qty.: 0.0350 GALLON(s)/Unit Total: 0.0350 GALLON(s)
Dupont Reducer N° 12375S N° de Lot: 1-5769-3

43.0 PRÉPARATION 3 PRÉPARATION DU MATÉRIEL DART

Commentair Setup: 0.00Hrs/ Run: 15.0000Min Total Run: 0.2500Hrs
PRÉPARATION DU MATÉRIEL

Bien brasser les trois contenants servant à faire le mélange du primer gris N° 1104S et ensuite faire le mélange selon les instruction du fabricant.

44.0 PEINT/PRIMER2 PEINTURE / PRIMER DART

Commentair Setup: 0.00Hrs/ Run: 20.0000Min Total Run: 0.3333Hrs
APPLICATION DE PRIMERAppliquer la deuxième couche de primer Dupont N° 1104S (7975S Activator, 12375S Reducer.) Selon I.G. #
Application du primer

Date: 23-8-07 Heure Début: 2:00 Heure Fin: 2:15 Sceau:



Date: Jeudi, 2007-03-29 10:34:05

Utilisateur: Marc Dubé

Feuille de Procédé

Client: DART Dart Aerospace Ltd.

Nom Dessin: SPACEPOD DOOR

Numéro Job: 41325

Numéro Article: DKC134-0052

Numéro Job:



Séq.:

Machine ou Opération:

Description :

45.0

INSPECTION 3

INSPECTION PIÈCE DART



Commentaire Setup: 0.00Hrs/ Run: 5.0000Min Total Run : 0.0833Hrs

INSPECTION PIÈCE DART



27-08-07 N.S.

Emballage QT /

31-8/07

